
REPLACEMENT PARTS MANUAL WALL MOUNT HEATER PACKAGE

MODELS: EHWH38-A05, EHWH38-B06, EHWH38-B09, EHWH49-A05,
EHWH49-A08, EHWH49-A10, EHWH49-B06, EHWH49-B09,
EHWH49-C06, EHWH49-C09

General Notes

- Revised and/or additional pages may be issued from time to time.
- A complete and current manual consists of pages shown in the following contents section.

Contents

<u>Description</u>	<u>Page</u>
Heater Packages / Heat Pump	
• Exploded View	1
• Usage List	2

Important

- Contact the installing and/or local Bard distributor for all parts requirements. Make sure you have the complete model and serial number available from the unit rating plates.





BARD MANUFACTURING COMPANY
Bryan, Ohio 43506

Since 1914...Moving, ahead just as planned.

Manual: 2110-607
Supersedes:
File: Vol III Tab 18
Date: 02-18-99

HEAT PUMP HEATER PACKAGES

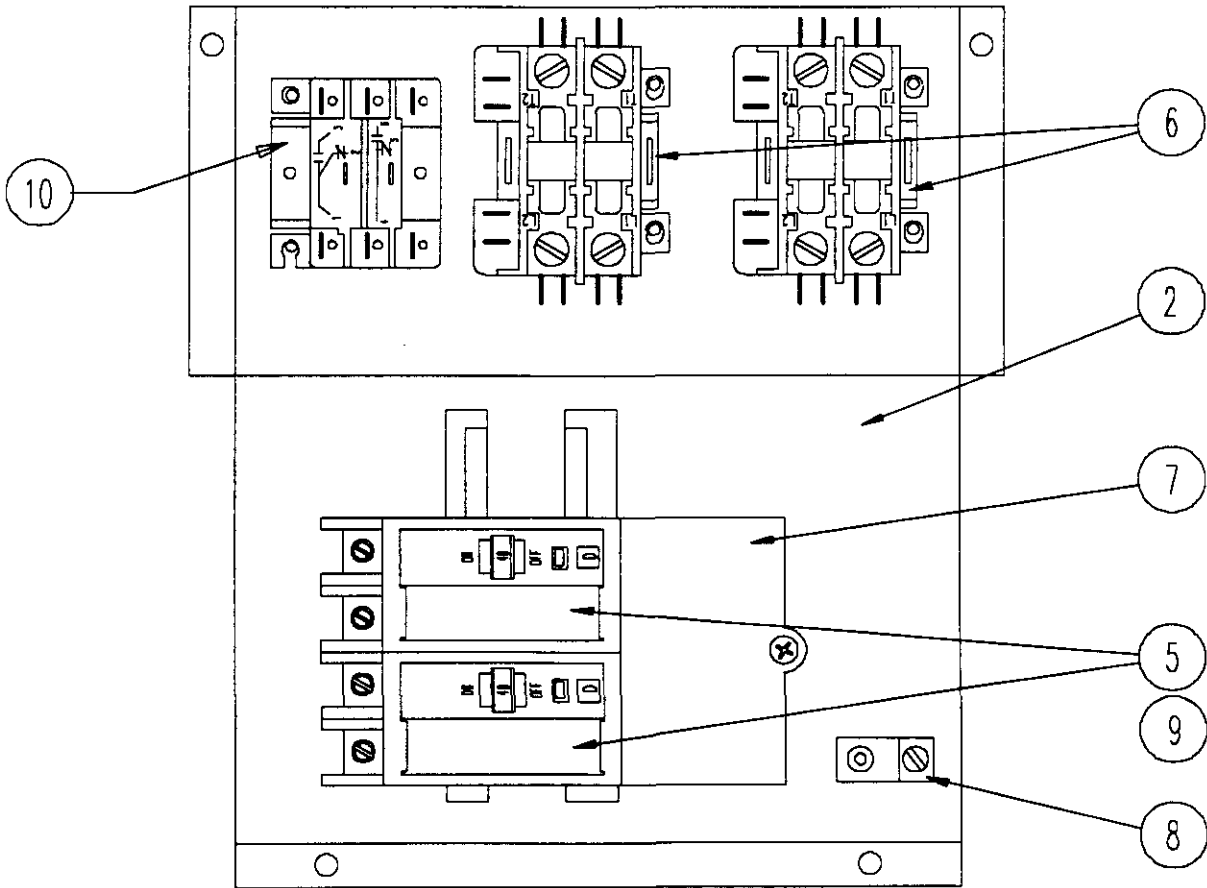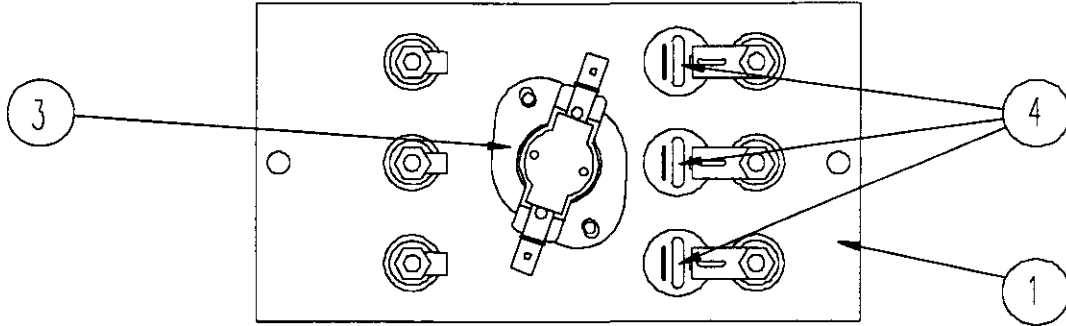

SEXP-165

HEAT PUMP HEATER PACKAGES

Drawing			EHWH38-A05	EHWH38-B06	EHWH38-B09	EHWH49-A05	EHWH49-A08	EHWH49-A10	EHWH49-B06	EHWH49-B09	EHWH49-C06	EHWH49-C09
No.	Part No.	Description										
1	8604-089	Heat Strip 5 KW	X			X						
1	8604-049	Heat Strip 6 KW 230V		X					X			
1	8604-048	Heat Strip 9 KW 230V			X					X		
1	8604-100	Heat Strip 6 KW 480V									X	
1	8604-101	Heat Strip 9 KW 480V										X
1	8604-090	Heat Strip 8 KW					X					
1	8604-091	Heat Strip 10 KW						X				
2	127-210	Heater Control Base	X	X	X	X	X	X	X	X		
2	127-300	Heater Control Base									X	X
3	8402-047	Limit Control				X		X				
3	8402-065	Limit Control	X									
3	8402-074	Limit Control		X	X		X		X	X	X	X
4	8402-093	Thermal Cutoff		2	2	1	2		2	2		
4	8402-019	Thermal Cutoff						2				
4	8402-096	Thermal Cutoff	X									
4	8402-094	One Shot Limit									2	2
5	8615-037	Circuit Breaker 30A	X			X						
5	8615-064	Circuit Breaker 25A 3 Ph 480V									X	
5	8615-045	Circuit Breaker 50A 3Ph			X				X			
5	8615-040	Circuit Breaker 50A	X			X		X				
5	8615-041	Circuit Breaker 60A						X				
5	8615-044	Circuit Breaker 45A 3 Ph		X								
5	8615-039	Circuit Breaker 45A					X					
5	8615-065	Circuit Breaker 30A 3 Ph 480V										X
5	8615-046	Circuit Breaker 60A 3 Ph 230V								X		
6	8401-006	Heat Contactor 2 Pole	X			X						
6	8401-002	Heat Contactor 3 Pole		X	X		X	X	X	X	X	X
7	8615-047	Jumper Bar	X			X	X	X				
9	8615-049	Jumper Bar Cover	X			X	X	X				
NS	4097-122	Wiring Diagram	X			X						
NS	4097-142	Wiring Diagram					X	X				
NS	4097-221	Wiring Diagram		X	X				X	X		
NS	4097-324	Wiring Diagram									X	X

NS = Not Shown

