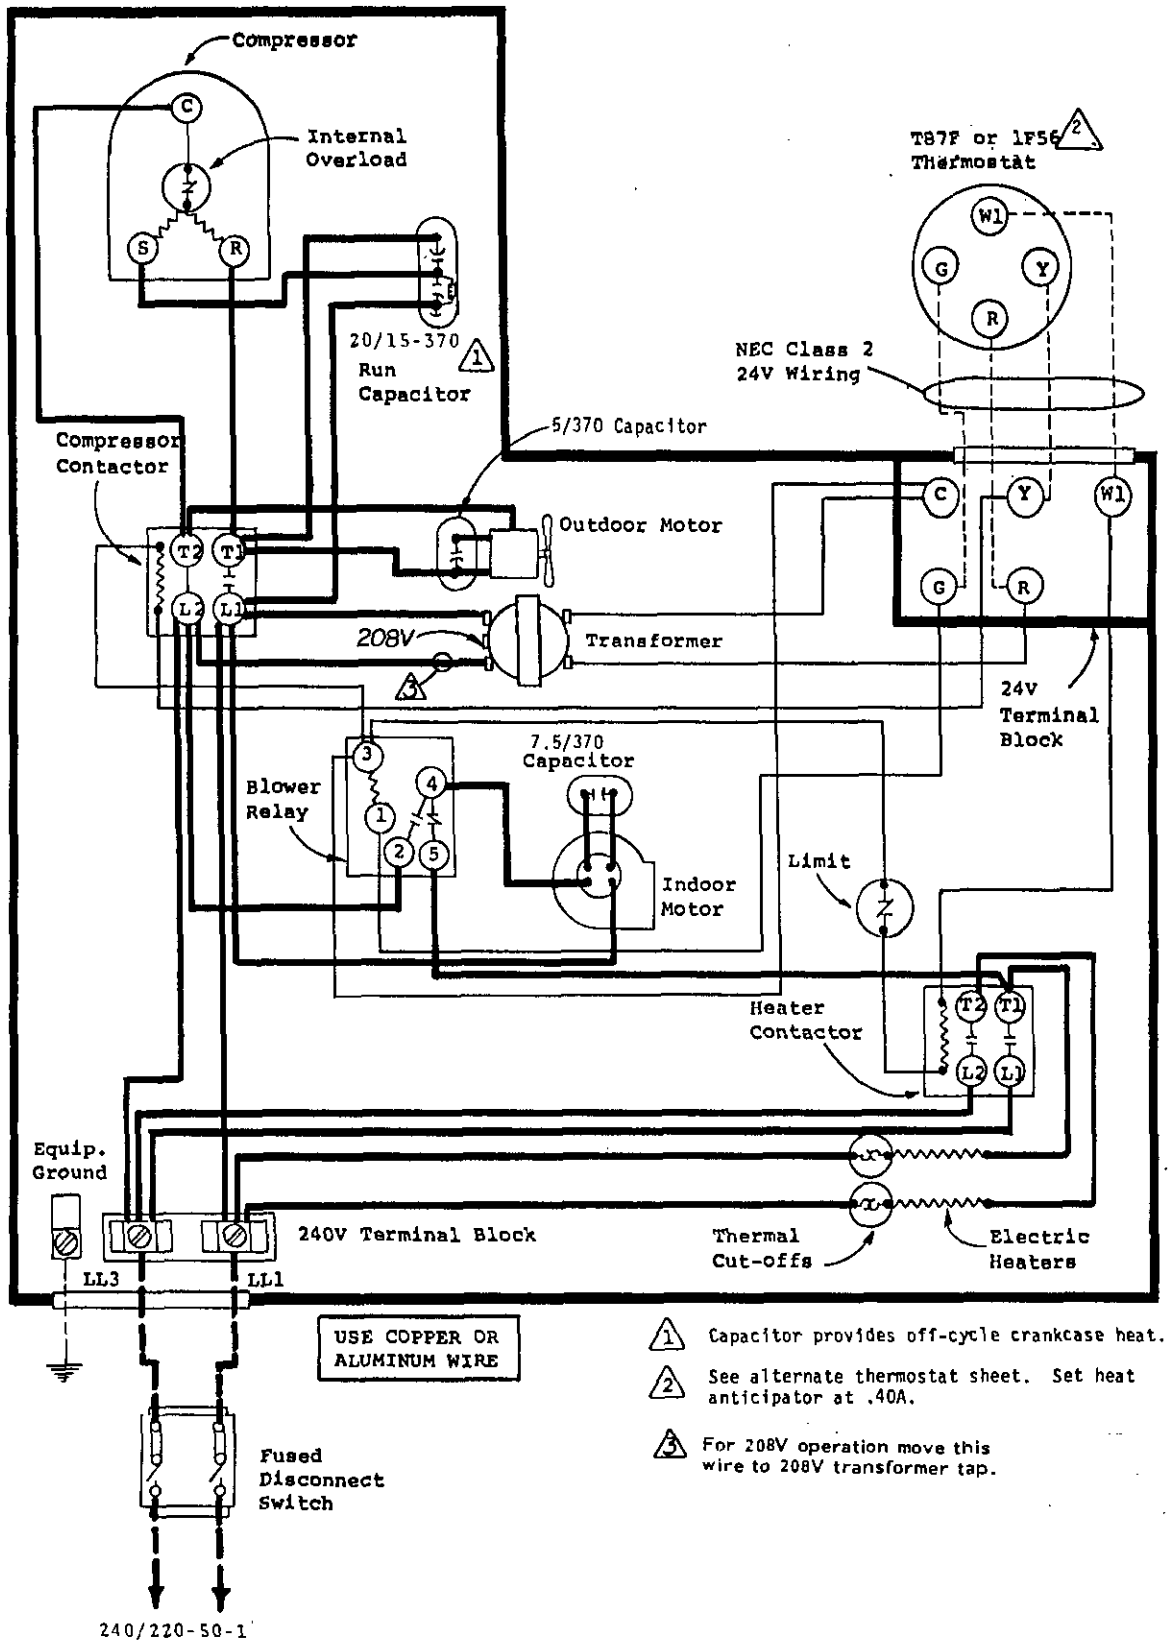

1 Capacitor provides off-cycle crankcase heat.

2 See alternate thermostat sheet. Set heat anticipator at .40A.

3 For 208V operation move this wire to 208V transformer tap.

FACTORY WIRING	FIELD WIRING
Low Voltage ———	- - - -
High Voltage ═══	- - - -

4007-430