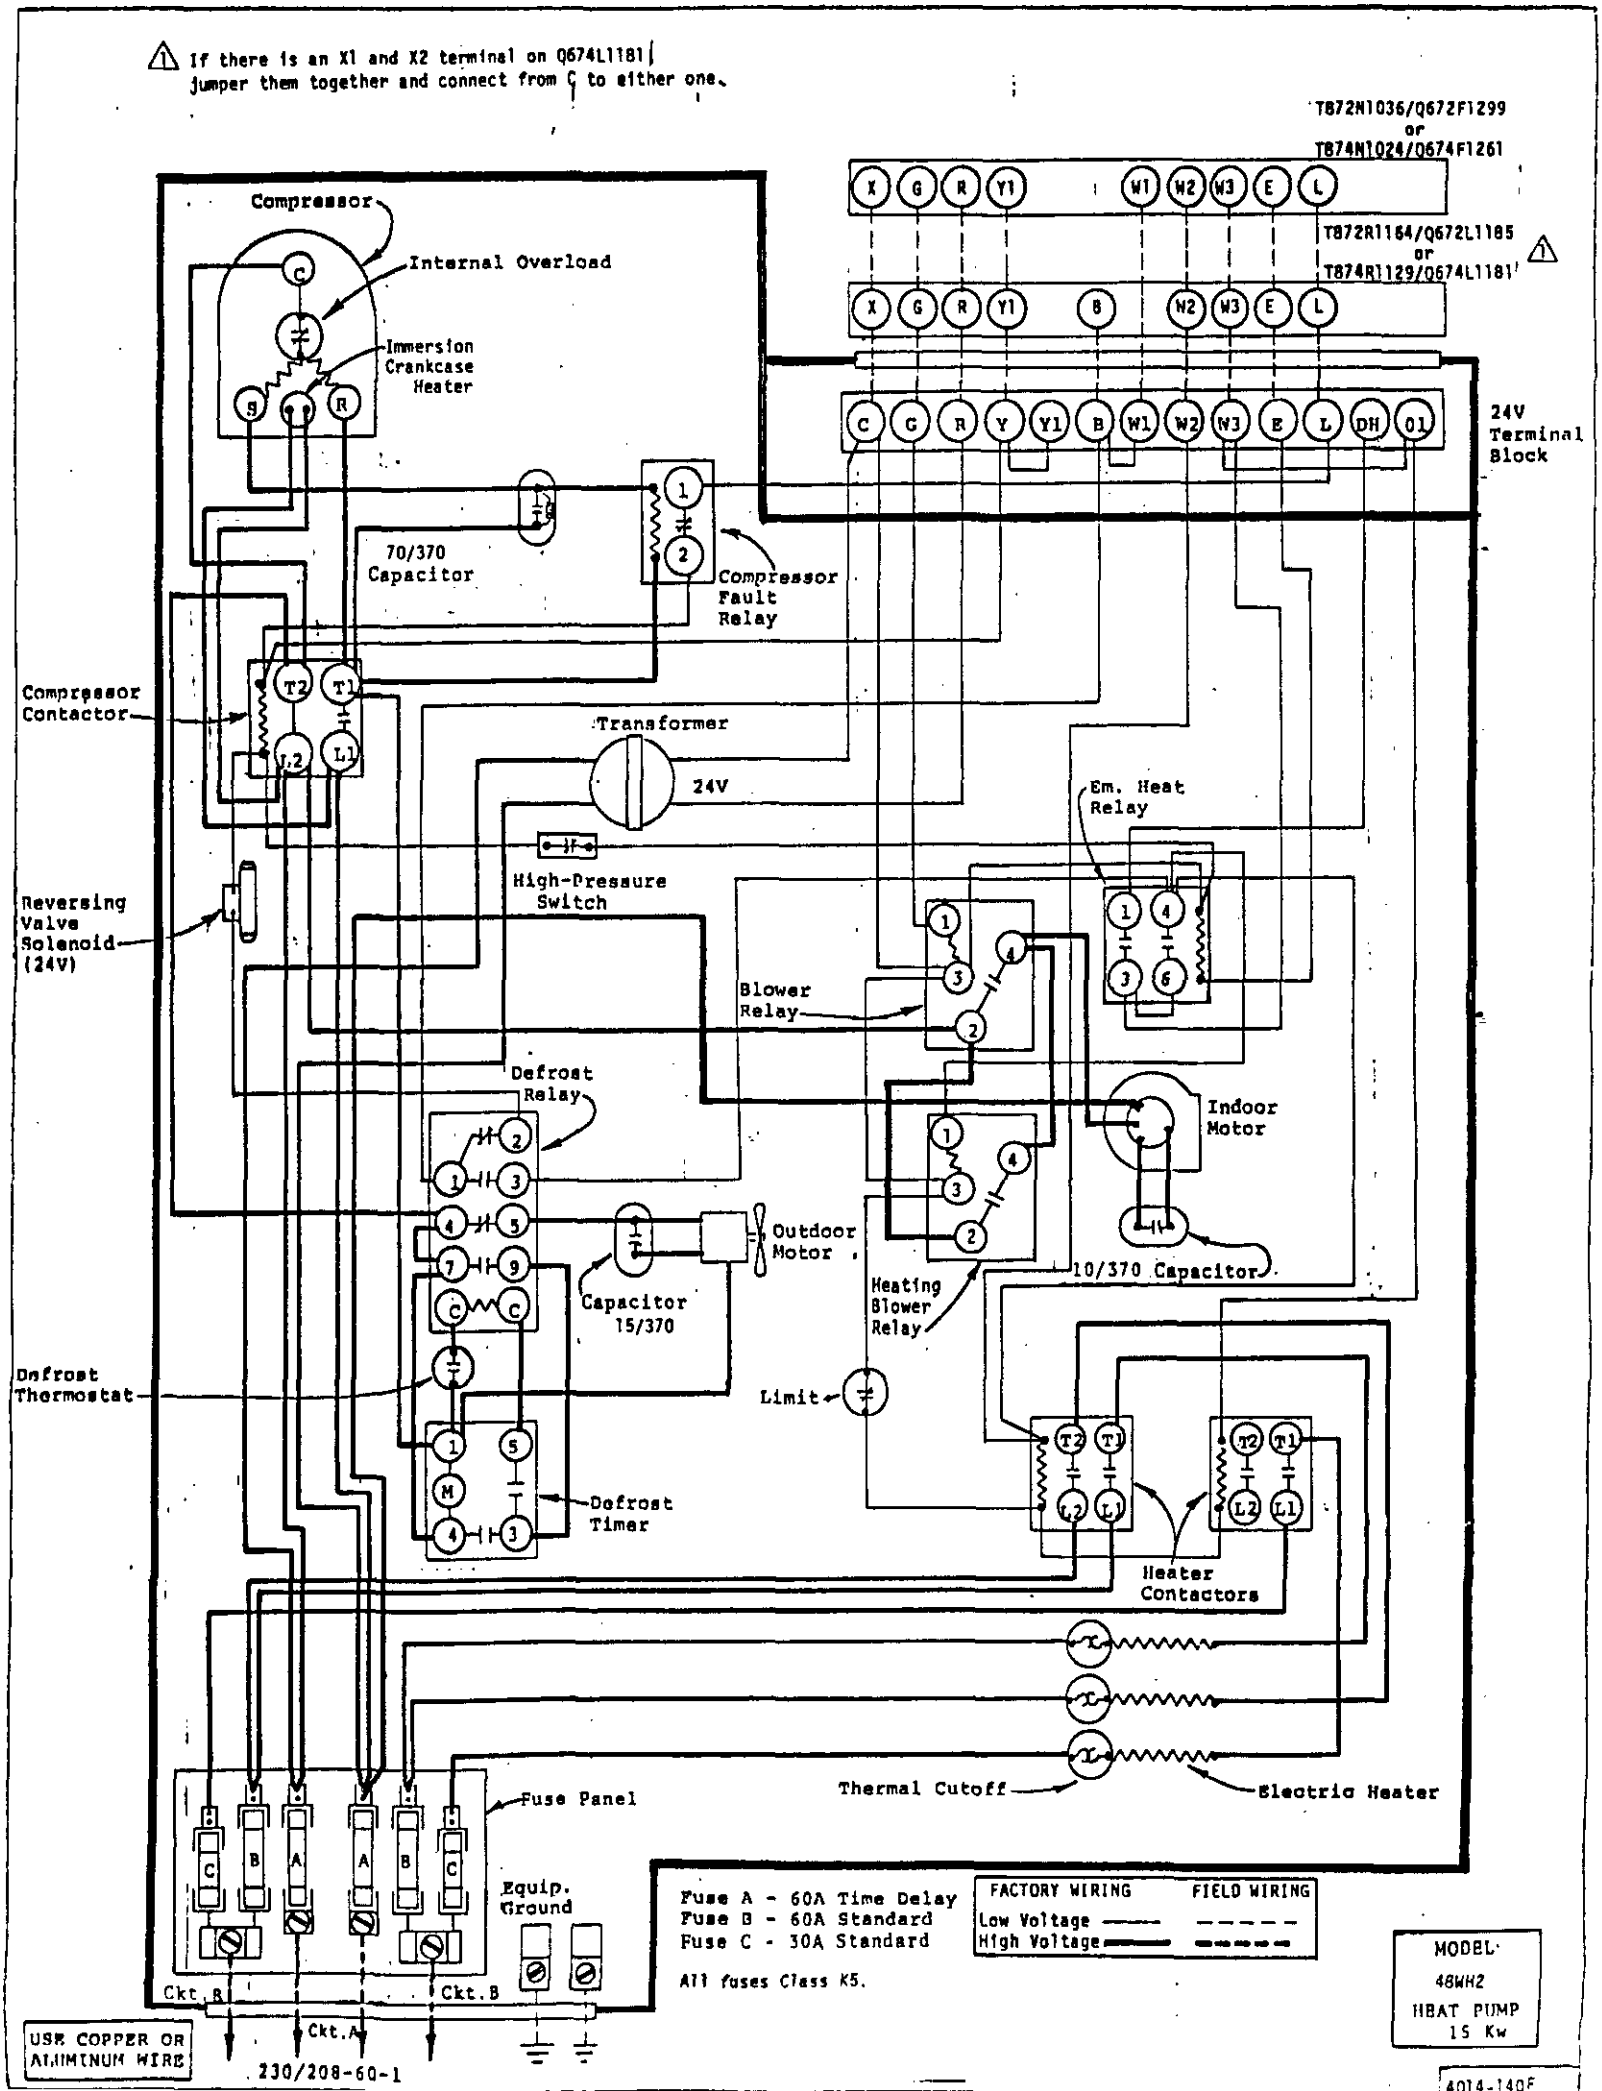
⚠ If there is an X1 and X2 terminal on Q674L1181 jumper them together and connect from C to either one.
T872N1036/Q672F1299 or T874N1024/Q674F1261
T872R1164/Q672L1185 or T874R1129/Q674L1181
⚠
X G R Y1 W1 W2 W3 E L
X G R Y1 B W2 W3 E L
C G R Y Y1 B W1 W2 W3 E L DH O1
24V Terminal Block
Compressor
Internal Overload
Immersion Crankcase Heater
S R C
70/370 Capacitor
Compressor Fault Relay
Compressor Contactor
T2 T1 L2 L1
Transformer
24V
Em. Heat Relay
High-Pressure Switch
Reversing Valve Solenoid (24V)
Blower Relay
Defrost Relay
Indoor Motor
Outdoor Motor
Capacitor 15/370
10/370 Capacitor
Heating Blower Relay
Limit
Defrost Thermostat
Defrost Timer
Heater Contactors
Thermal Cutoff
Electric Heater
Fuse Panel
C B A A B C
Equip. Ground
Ckt.B
Ckt.A
Ckt.B
230/208-60-1
USE COPPER OR ALUMINUM WIRE
Fuse A - 60A Time Delay
Fuse B - 60A Standard
Fuse C - 30A Standard
All fuses Class K5.
FACTORY WIRING
FIELD WIRING
Low Voltage
High Voltage
MODEL
48WH2
HEAT PUMP
15 Kw
4014-140F