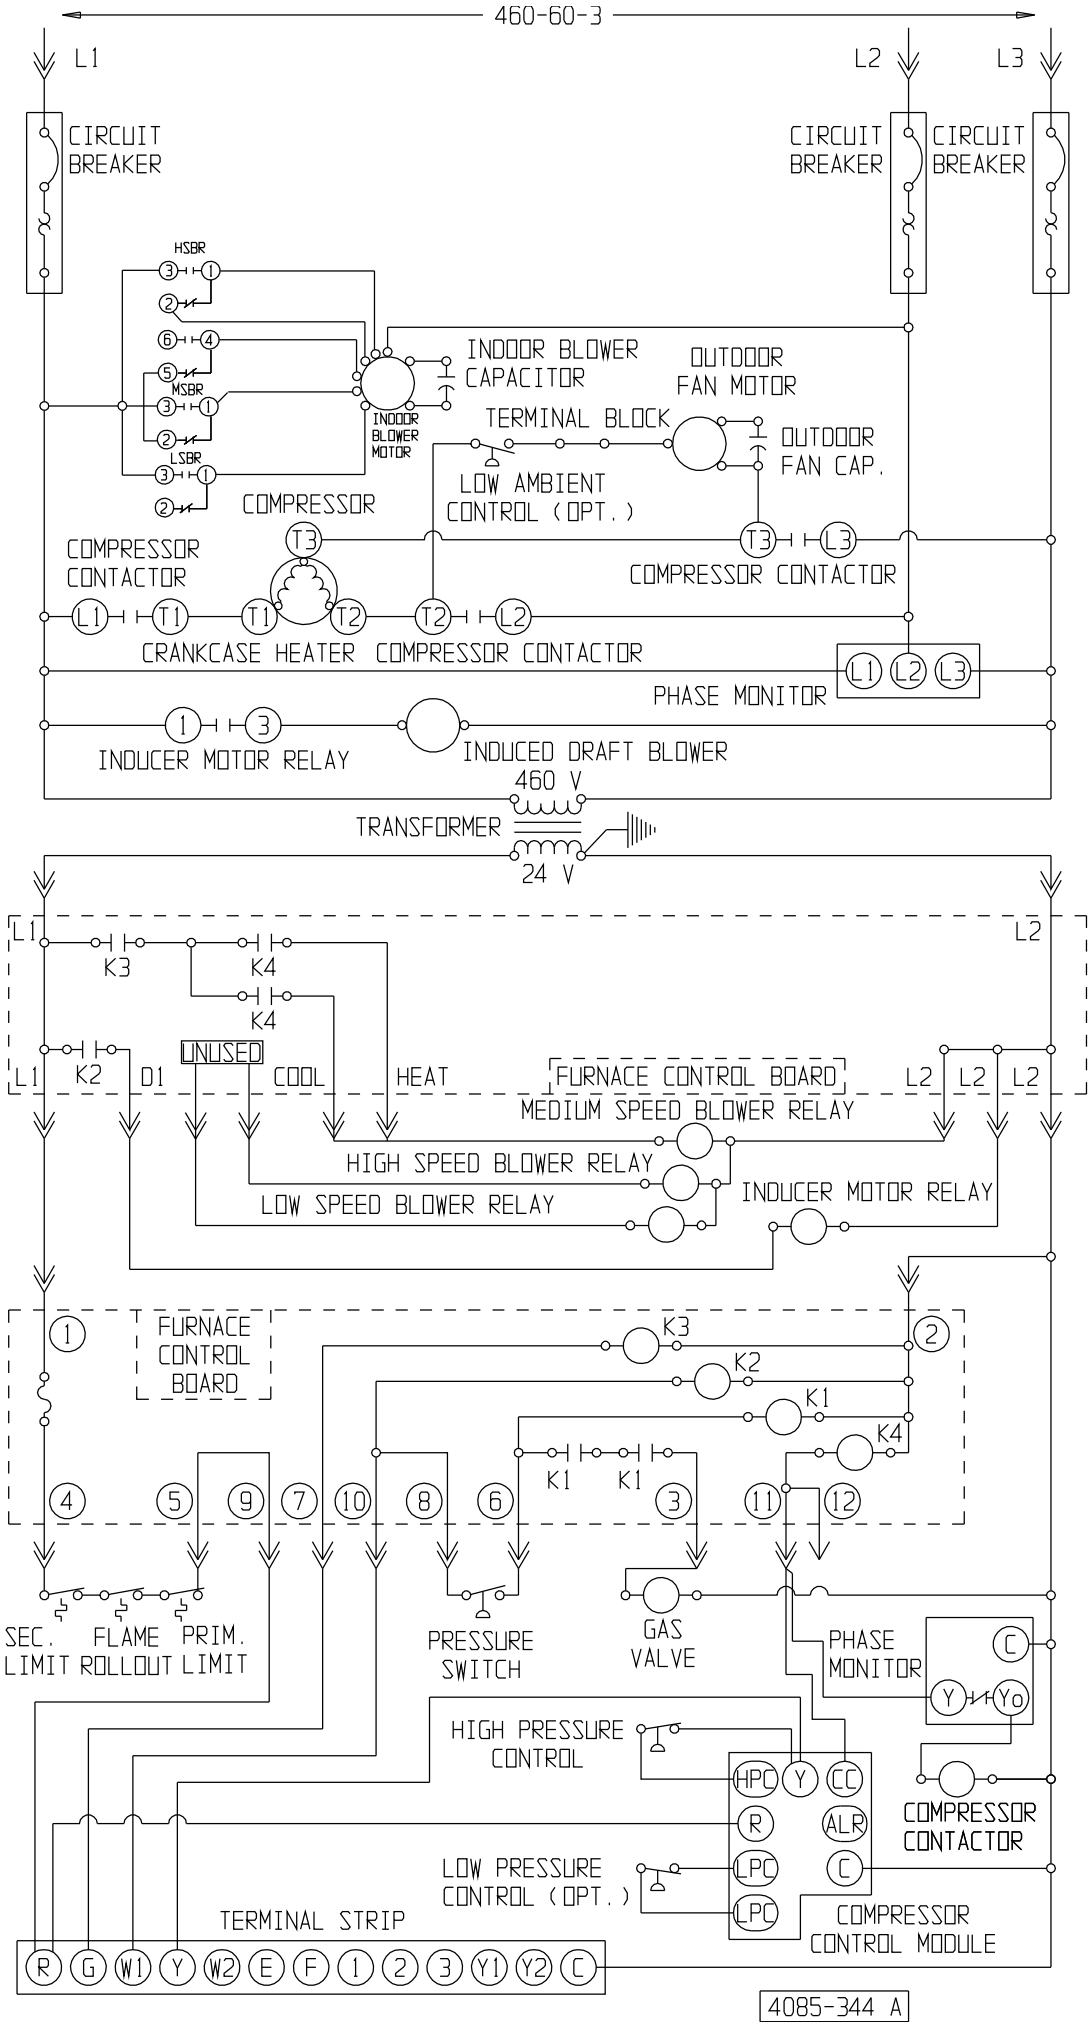
460-60-3
L1
L2
L3
CIRCUIT BREAKER
CIRCUIT BREAKER
CIRCUIT BREAKER
HSBR
MSBR
LSBR
INDOOR BLOWER MOTOR
INDOOR BLOWER CAPACITOR
OUTDOOR FAN MOTOR
TERMINAL BLOCK
OUTDOOR FAN CAP.
LOW AMBIENT CONTROL (OPT.)
COMPRESSOR
COMPRESSOR CONTACTOR
COMPRESSOR CONTACTOR
CRANKCASE HEATER
COMPRESSOR CONTACTOR
PHASE MONITOR
INDUCER MOTOR RELAY
INDUCED DRAFT BLOWER
460 V
TRANSFORMER
24 V
K3
K4
K4
K2
D1
UNUSED
COOL
HEAT
FURNACE CONTROL BOARD
MEDIUM SPEED BLOWER RELAY
HIGH SPEED BLOWER RELAY
LOW SPEED BLOWER RELAY
INDUCER MOTOR RELAY
FURNACE CONTROL BOARD
K1
K2
K3
K4
K1
K1
SEC. LIMIT
FLAME ROLLOUT
PRIM. LIMIT
PRESSURE SWITCH
GAS VALVE
PHASE MONITOR
HIGH PRESSURE CONTROL
LOW PRESSURE CONTROL (OPT.)
COMPRESSOR CONTACTOR
COMPRESSOR CONTROL MODULE
TERMINAL STRIP
R G W1 Y W2 E F 1 2 3 Y1 Y2 C
4085-344 A