

INSTALLATION INSTRUCTIONS

PACKAGED AIR CONDITIONERS

MODELS

MU30A

MU36C

MU42D

**FOR RESIDENTIAL, COMMERCIAL,
OR MOBILE HOME
HEATING/COOLING APPLICATIONS**

MANUAL 2100-019 REV. H
SUPERSEDES REV. G
FILE VOL. II, TAB 14

COPYRIGHT AUGUST, 1989
BARD MANUFACTURING COMPANY
BRYAN, OHIO

TABLE OF CONTENTS

Important	1
Shipping Damage	1
General	1
Installation	2
Wiring--Main Power	2
Unpacking The Self-Contained Unit	2
Installing the Supply and Return Fittings on the Self-Contained Unit	2
Locating and Installing the Return Air Assembly-- Mobile Home Application	3
Locating and Installing the Supply Duct Connectors-- Mobile Home Application	3
Connecting the Insulated Return-Air and Supply Flexible Ducting	3
Recommended Register Type	3
Duct Requirements	4
Optional Electric Heater Packages	5
Installation	5
Wiring--Low Voltage Thermostat	5
Pressure Service Ports	5
Service Hints	5
Important Installer Note	6
Refrigerant Charge	6
Fan Blade Setting Dimensions	6
Crankcase Heaters	7

FIGURES AND TABLES

Figure 1 6
Figure 2 7
Figure 3 8
Figure 4 8
Figure 5 9
Figure 6 9

Table 1 1
Table 2 4
Table 3 4
Table 4 5
Table 5 6
Table 6 10

TABLE 1

ELECTRICAL INFORMATION										WIRING INFORMATION (2)				
Model	Rated Volts & Phase	Optional Heater Package	Max. Unit Amps	No. Field Circuit Amps	Optional Heater Internal Fuses	Required (1) Overcurrent Protection		Minimum Circuit Ampacity		Power Circuit Wiring		Ground Wire (3) Size		
						Ckt A	Ckt B	Ckt A	Ckt B	Ckt A	Ckt B	Ckt A	Ckt B	
MU30A	230/208 60/1	None	19.3	1		35		24		10		10		
		EH3MA-A05	23.4	2			30		26		10		10	
		EH3MA-A10	44.2	2			60		52		6		10	
		EH3MA-A15	65.1	2	30/60		80		78		3		8	
		EH3MA-A20	85.7	2	60		110		104		1		6	
MU36C	230/208 60/1	None	22.3	1		40		27		10		10		
		EH3MA-A05	23.4	2			30		26		10		10	
		EH3MA-A10	44.2	2			60		52		6		10	
		EH3MA-A15	65.1	2	30/60		80		78		3		8	
		EH3MA-A20	85.7	2	60		110		104		1		6	
MU42D	230/208 60/1	None	25.3	1		50		31		8		10		
		EH3MA-A05	25.3	2			30		26		10		10	
		EH3MA-A10	44.2	2			60		52		6		10	
		EH3MA-A15	65.1	2	30/60		80		78		3		8	
		EH3MA-A20	85.7	2	60		110		104		1		6	

(1) Time delay fuses or "HACR Type" circuit breakers must be used for 60 and smaller sizes. Standard fuses or circuit breakers are suitable for sizes 70 and larger.

(2) Based on 60 degree C copper wire. Other wiring materials must be rated for marked "Minimum Circuit Ampacity" or greater.

(3) Based on Table 250-95 of N.E.C., 1981.

IMPORTANT

The equipment covered in this manual is to be installed by trained, experienced service and installation technicians. All duct work supply and return, must be properly sized for the design air flow requirement of the equipment. NESCA is an excellent guide to proper sizing. All duct work or portions thereof not in the conditioned space should be properly insulated in order to both conserve energy and prevent condensation or moisture damage.

SHIPPING DAMAGE

Upon receipt of equipment, the carton should be checked for external signs of shipping damage. If damage is found, the receiving party must contact the last carrier immediately, preferably in writing, requesting inspection by the carrier's agent.

GENERAL

The refrigerant system is completely assembled and charged. All internal wiring is complete.

These instructions explain the recommended method to install the air cooled self-contained unit and the electrical wiring connections to the unit.

These instructions and any instructions packaged with any separate equipment required to make up the entire air conditioning system should be carefully read before beginning the installation. Note particularly "Starting Procedure" and any tags and/or labels attached to the equipment.

While these instructions are intended as a general recommended guide, they do not supersede any national and/or local codes in any way. Authorities having jurisdiction should be consulted before the installation is made.

INSTALLATION

Size of unit for a proposed installation should be based on heat loss calculation made according to methods of National Warm Air Heating and Air Conditioning Association. The air duct should be installed in accordance with the Standards of the National Fire Protection Association for the Installation of Air Conditioning and Ventilating Systems of Other Than Residence Type, NFPA No. 90A, and Residence Type Warm Air Heating and Air Conditioning Systems, NFPA No. 90B. Where local regulations are at a variance with instructions, installer should adhere to local codes.

WIRING--MAIN POWER

Refer to the unit rating plate for wire sizing information and maximum fuse or "HACR Type" circuit breaker size. Each unit is marked with a "Minimum Circuit Ampacity." This means that the field wiring used must be sized to carry that amount of current. Refer to the National Electrical Code for complete current carrying capacity data on the various insulation grades of wiring material.

If an optional heater package is installed, a separate power circuit must be added. Refer to the Electrical Information Chart for circuit information. **DO NOT ATTEMPT TO COMBINE A BASIC UNIT AND A HEATER PACKAGE TO ONE POWER SUPPLY CIRCUIT.**

The unit rating plate lists a "Maximum Time Delay Relay Fuse" of "HACR Type" circuit breaker that is to be used with the equipment. The correct size must be used for proper circuit protection and also to assure that there will be no nuisance tripping due to the momentary high starting current of the compressor motor.

If this unit is operated in cooling below a 65 degree outdoor ambient temperature, the installation of low ambient control (LAC-1) to unit is required.

UNPACKING THE SELF-CONTAINED UNIT

It is recommended that the unit be unpacked at the installation site to minimize damage due to handling.

1. Cut and remove the metal band from around unit.
2. Remove the carton from the unit.
3. The installation manual is contained in an envelope shipped with the unit. Make sure that it does not get lost.
4. Carefully block up the unit and remove the shipping skid.
5. **CAUTION:** DO NOT tip the unit on its side. Oil may enter the compressor cylinders and cause starting or operating trouble. If unit has set on its side, restore to upright position and do not run for several hours. Also run intermittently for a few seconds. Do this three or four times with three minutes in between. Observe abnormal compressor noise.

INSTALLING THE SUPPLY AND RETURN FITTINGS ON THE SELF-CONTAINED UNIT

The supply and return fittings are to be fastened with sheet metal screws on three sides. Seal with duct tape on all four sides.

LOCATING AND INSTALLING THE RETURN AIR ASSEMBLY--MOBILE HOME APPLICATION

IMPORTANT: The MU42D requires two twelve inch diameter return air ducts. Sufficient airflow for proper system operation is not available using a single return air duct.

To avoid complications, locate and install the return air assembly first. The return air box with grille and filter can be located anywhere in the floor of the mobile home. Keep in mind that the closer to the cooling unit the better because less duct will be needed. Always use at least one 7' length of duct, however, a good spot is under the television set in a corner or under a table or davenport if a minimum of two inch clearance is available. If desired, the return opening can be located inside a closet with louvered doors. The return air grille can be placed in the wall of a closet and the air conducted into the filter box through a boxed-in area at the closet floor level. Make sure filter is readily accessible.

After determining the location of the return air opening, start the installation from under the home by cutting a small hole in the fiber underboard to determine how the floor joist location will affect the cutting of the opening needed for the box. Floor joists generally are located on 16" centers leaving 14-3/8" between joists. After measuring the return air box, cut the hole so the box will fit between the floor joists. In most installations it will be necessary to cut a similar hole in the fiberboard directly under the one in the floor. However, if the floor is more than 10" deep, it will only be necessary to cut a round hole for the collar on the return air box or for the insulated duct.

Finally, set the box into the opening and fasten with screws or nails. Put the filter and the return air grille in place.

LOCATING AND INSTALLING THE SUPPLY DUCT CONNECTORS--MOBILE HOME APPLICATION

When locating the supply duct connector, check carefully for floor joists, axles, wheels and frame members that could interfere with the installation of the connector or with the running of the flexible duct. Ideally, the supply duct connector should be located in the bottom of the main duct, forward of center of the mobile home **BUT NOT UNDER A REGISTER.**

To locate the center of the duct, first cut a 6" hole in the fiberboard below the duct at the desired location. After locating the duct center, increase the hole in the fiberboard to approximately the size of the connector to be used. Next cut an opening in the bottom of the duct 1/8" larger than the actual dimension of the connector being used. After inserting the connector, bend the tabs flat inside the duct.

It is a good practice to seal all connections with duct tape. Seal the opening in the fiberboard around the duct connector.

For double wide homes or for special applications, these connectors are fed by two flexible ducts.

CONNECTING THE INSULATED RETURN-AIR AND SUPPLY FLEXIBLE DUCTING

All flexible ducts are furnished with a male and female metal end. The ducts can be connected to the corresponding fitting and sheet metal screwed in place. Slide the insulation and outer jacket over the end and use duct tape to seal joints.

If the flexible ducts are long enough, it will be easier to connect them to the fittings on the unit before sliding the unit into place.

RECOMMENDED REGISTER TYPE

Satisfactory heating/cooling of a mobile home will depend greatly on what type register is used. A very open type with no deflection (allowing the air to move straight up) is best. If these are not available, straighten the fins of the present registers as much as possible.

DUCT REQUIREMENTS

THE SUPPLY DUCT SYSTEM, INCLUDING THE NUMBER AND TYPE OF REGISTERS, WILL HAVE MUCH MORE EFFECT ON THE PERFORMANCE OF AN AIR CONDITIONING SYSTEM THAN ANY OTHER FACTOR! The duct must be sufficiently large to conduct an adequate amount of air to each register. The registers must be designed to throw the cooled air up to the ceiling. The duct must be built tightly enough to prevent loss of cooled air to the outside.

IMPORTANT: The MU42D unit requires two twelve inch diameter return air ducts. Sufficient airflow for proper system operation is not available for using a single return air duct.

The output delivery of the system will not cool the home if the air is lost to the outside through leaks in the duct system. Also, the duct can be large enough in dimension but too small because it is collapsed or restricted with a foreign object. See chart for airflow and static pressure capabilities.

For rooftop or permanent structure applications, either round pipe or rectangular ductwork can be used, following standard duct sizing and layout techniques.

TABLE 2

INDOOR BLOWER PERFORMANCE CFM--DRY COIL			
E.S.P. In H ₂ O ***	MU30A	MU36C	MU42D
.0	1295	1335	1475
.1	1250	1290	1445
.2	1200	1230	1410
.3	1135	1175	1360
.4	1075	1120	1310
.5	1000	1050	1235
.6**	940	980	1160
*CFM with 10KW heaters installed. **Maximum E.S.P. on heating. ***With 20 x 20 permanent filter and return air filter box installed.			

TABLE 3

RATED CFM AND E.S.P. (WET COIL--COOLING)			
Model	Rated CFM	Rated E.S.P.	Recommended Airflow Range
MU30A	1000	.50	900 - 1100
MU36C	1050	.50	945 - 1155
MU42D	1200	.50	1080 - 1320

OPTIONAL ELECTRIC HEATER PACKAGES

Four electric heater packages are available as options. Each package comes complete with heaters and controls. Model numbers of approved electric heat packages are as follows:

EH3MA-A05	(5KW)
EH3MA-A10	(10KW)
EH3MA-A15	(15KW)
EH3MA-A20	(20KW)

IMPORTANT: A separate power entrance is required for the heater package. DO NOT attempt to wire a basic unit and a heater package to one power circuit.

INSTALLATION

Installation of the heat package requires removing the unit blower from its securing slide mount, inserting the heat package into the same mount and reinstalling the unit blower into a similar mount on the heat package. A minimal amount of wiring is required. Refer to the heat package installation instructions for detailed installation information.

WIRING--LOW VOLTAGE THERMOSTAT

To select the appropriate number of thermostat wires to be run and the correct thermostat, refer to the chart below.

TABLE 4

Optional Heater Package	Number of Thermostat Wires Req'd	Thermostat/Subbase
None	3	T87F-3111/Q539A1220 IF56-318
EH3MA-A05	4	T87F-3111/Q539A1220 IF56-318
EH3MA-A10	4	T87F-3111/Q539A1220 IF56-318
EH3MA-A15	5	T874C1000/Q674A1001
EH3MA-A20	5	T874C1000/Q674A1001

PRESSURE SERVICE PORTS

High and low pressure service ports are installed on all units so that the system operating pressures can be observed. Pressure charts can be found later in the manual covering all models. It is imperative to match the correct pressure chart to the unit by model number.

SERVICE HINTS

1. Caution homeowner to maintain clean air filters at all times. Also, not to needlessly close off supply and return air registers. This reduces air flow through the system, which shortens equipment service life as well as increasing operating costs.
2. Check all power fuses or circuit breakers to be sure that they are the correct rating.
3. Periodic cleaning of the outdoor coil to permit full and unrestricted airflow circulation is essential.

IMPORTANT INSTALLER NOTE

For improved start-up performance, wash the indoor coil with a dishwasher detergent.

REFRIGERANT CHARGE

The correct system R-22 charge is shown on the unit rating plate. Optimum unit performance will occur with a refrigerant charge resulting in a suction line temperature (6" from compressor) as shown in the following table:

TABLE 5

Model	Rated Airflow	o	o
		95 F OD Temperature	82 F OD Temperature
MU30A	1000	49 - 51	63 - 65
MU36C	1050	57 - 59	63 - 65
MU42D	1200	59 - 61	64 - 66


The above suction line temperatures are based upon 80 degrees F dry bulb/67 degrees F wet bulb (50% R.H.) temperature and rated airflow across the evaporator during cooling cycle.

FAN BLADE SETTING DIMENSIONS

Shown in the drawing below are the correct fan blade setting dimensions for proper air delivery across the outdoor coil.

Any service work requiring removal or adjustment in the fan and/or motor area will require that the dimensions below be checked and blade adjusted in or out on the motor shaft accordingly.

FIGURE 1

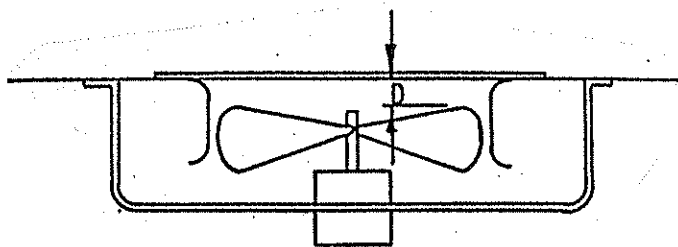

Model	Dimension D
MU30A	2.00"
MU36C	2.00"
MU42D	2.00"

CRANKCASE HEATERS

All units are provided with some form of compressor crankcase heat. Some single phase units utilize the compressor motor start winding in series with a portion of the run capacitor to generate heat within the compressor shell to prevent liquid refrigerant migration.

Some single phase models have an insertion well-type heater located in the lower section of the compressor housing. This is a self-regulating type heater that draws only enough power to maintain the compressor at a safe temperature.

Some form of crankcase heat is essential to prevent liquid refrigerant from migrating to the compressor, causing oil pump out on compressor start-up and possible valve failure due to compressing a liquid.

Refer to unit wiring diagram to find exact type of crankcase heater used.

The decal in Figure 2 is affixed to all outdoor units detailing start-up procedure. This is very important. Please read carefully.

FIGURE 2

IMPORTANT

THESE PROCEDURES MUST BE FOLLOWED AT INITIAL START-UP AND AT ANY TIME POWER HAS BEEN REMOVED FOR 12 HOURS OR LONGER.


TO PREVENT COMPRESSOR DAMAGE WHICH MAY RESULT FROM THE PRESENCE OF LIQUID REFRIGERANT IN THE COMPRESSOR CRANKCASE:

1. MAKE CERTAIN THE ROOM THERMOSTAT IS IN THE "OFF" POSITION. (THE COMPRESSOR IS NOT TO OPERATE).
2. APPLY POWER BY CLOSING THE SYSTEM DISCONNECT SWITCH. THIS ENERGIZES THE COMPRESSOR HEATER WHICH EVAPORATES THE LIQUID REFRIGERANT IN THE CRANKCASE.
3. ALLOW 4 HOURS OR 60 MINUTES PER POUND OF REFRIGERANT IN THE SYSTEM AS NOTED ON THE UNIT RATING PLATE, WHICHEVER IS GREATER.
4. AFTER PROPERLY ELAPSED TIME THE THERMOSTAT MAY BE SET TO OPERATE THE COMPRESSOR.
5. EXCEPT AS REQUIRED FOR SAFETY WHILE SERVICING — DO NOT OPEN SYSTEM DISCONNECT SWITCH.

7961-061

Figure 3

TYPICAL MU30A, MU36C
SINGLE SUPPLY DUCT SYSTEM

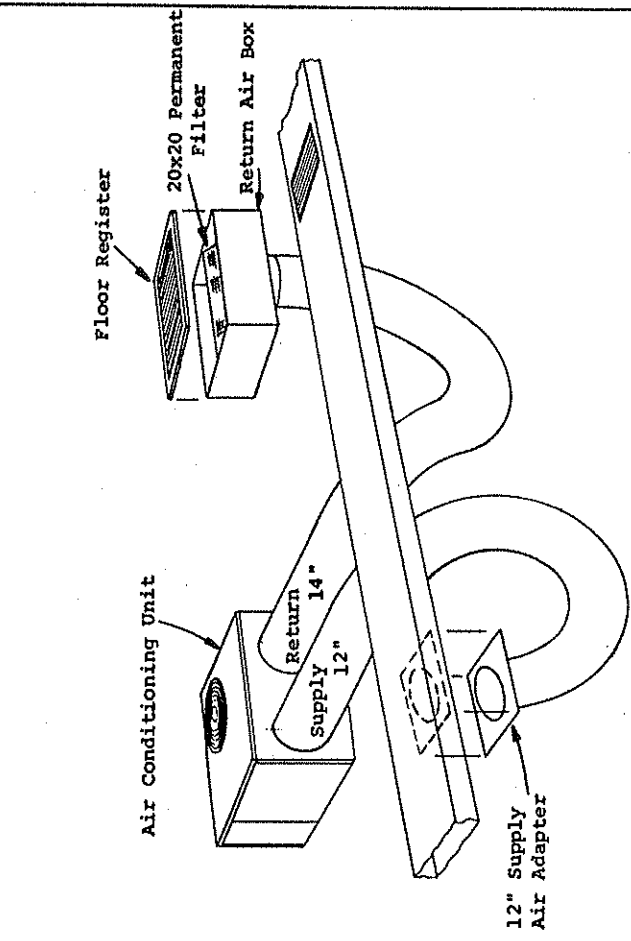


- Qty. 1 7001-014 Fitting Pack
 (1) 12½ x 20 x 10½ Return Air Box
 (1) 20 x 20 Permanent Filter
 (1) 12 x 20 Floor Register
 (1) 12" Supply Air Adapter

NOTE: Flex Ducts are not supplied as part of the basic unit (field supplied).

Figure 4

OPTIONAL MU30A, MU36C
DOUBLE SUPPLY DUCT SYSTEM

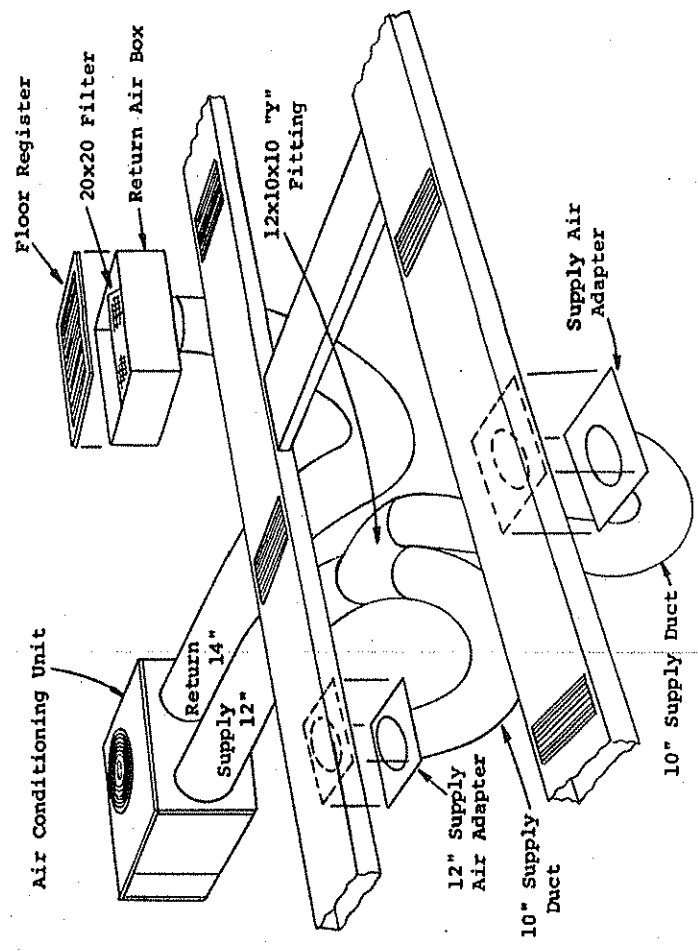


- Qty. 1 7001-014 Fitting Pack
 (1) 12½ x 20 x 10½ Return Air Box
 (1) 20 x 20 Permanent Filter
 (1) 12 x 20 Floor Register
 (1) 12" Supply Air Adapter

- Qty. 1 7001-015 Fitting Pack
 (1) 12 x 10 x 10 "Y" Fitting
 (2) 10" Supply Air Adapter

NOTE: Flex Ducts are not supplied as part of the basic unit (field supplied).

Figure 5

OPTIONAL MU42D
DOUBLE SUPPLY DUCT SYSTEM

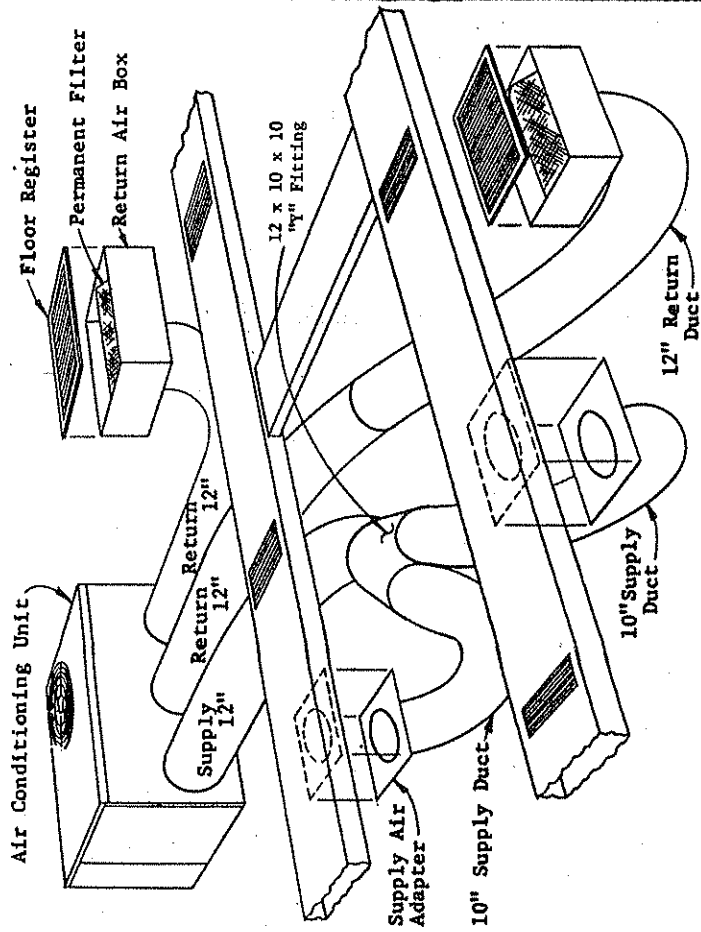


- Qty. 1 7001-015 Fitting Pack
 (1) 12 x 10 x 10 "v" Fitting
 (2) 10" Supply Air Adapter

- Qty. 2 7001-014 Fitting Pack
 (1) 12 1/2 x 20 x 10 1/2 Return Air Box
 (1) 20 x 20 Permanent Filter
 (1) 12 x 20 Floor Register
 (1) 12" Supply Air Adapter

IMPORTANT: Two 12 inch diameter return air ducts must be installed. Ducts are not supplied as part of the basic unit (field supplied).

Figure 6

TYPICAL MU42D
SINGLE SUPPLY DUCT SYSTEM

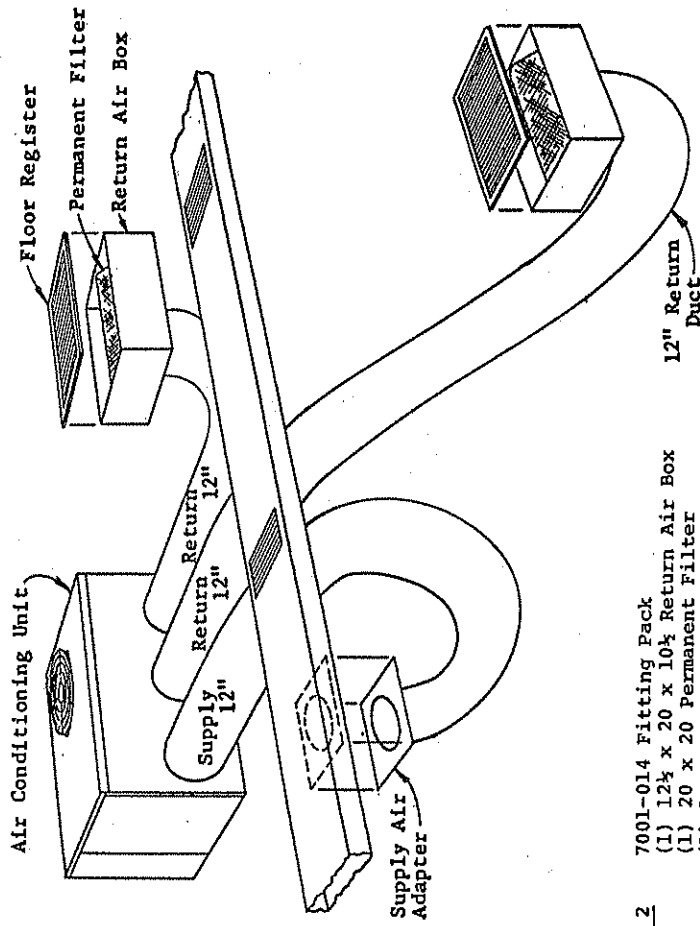

- Qty. 2 7001-014 Fitting Pack
 (1) 12 1/2 x 20 x 10 1/2 Return Air Box
 (1) 20 x 20 Permanent Filter
 (1) 12 x 20 Floor Register
 (1) 12" Supply Air Adapter

IMPORTANT: Two 12 inch diameter return air ducts must be installed. Ducts are not supplied as part of the basic unit (field supplied).

TABLE 6


COOLING

Air Temperature Entering Outdoor Coil Degree F

Model	Return Air Temperature	Pressure	°	°	°	°	°	°	°	°	°
			75	80	85	90	95	100	105	110	115
MU30A	75 deg. DB	Low Side	63	65	67	70	72	74	77	79	82
	62 deg. WB	High Side	194	209	224	240	255	271	287	302	318
	80 deg. DB	Low Side	66	69	72	74	77	80	82	85	88
	67 deg. WB	High Side	198	214	300	246	262	278	294	310	326
	85 deg. DB	Low Side	71	74	77	80	83	86	89	92	95
	72 deg. WB	High Side	204	221	238	254	271	288	304	321	337
MU36C	75 deg. DB	Low Side	63	65	67	69	71	73	75	77	79
	62 deg. WB	High Side	197	213	229	246	262	278	295	311	328
	80 deg. DB	Low Side	67	69	71	74	76	78	81	83	85
	67 deg. WB	High Side	201	218	235	252	269	286	303	319	336
	85 deg. DB	Low Side	71	74	77	79	82	84	87	89	91
	72 deg. WB	High Side	209	226	243	261	278	295	313	330	348
MU42D	75 deg. DB	Low Side	60	62	64	66	68	70	73	75	78
	62 deg. WB	High Side	210	227	244	261	277	293	309	325	341
	80 deg. DB	Low Side	64	66	68	71	73	75	78	80	83
	67 deg. WB	High Side	216	233	250	267	284	301	317	334	350
	85 deg. DB	Low Side	69	71	73	76	78	81	83	86	89
	72 deg. WB	High Side	223	241	259	277	294	311	328	345	362

Low side pressure \pm 2 PSIGHigh side pressure \pm 5 PSIG

Tables are based upon rated CFM (airflow) across the evaporator coil and should be found under section titled "Refrigerant Charge" elsewhere in manual. If there is any doubt as to correct operating charge being in the system, the charge should be removed, system evacuated, and recharged to serial plate instructions.

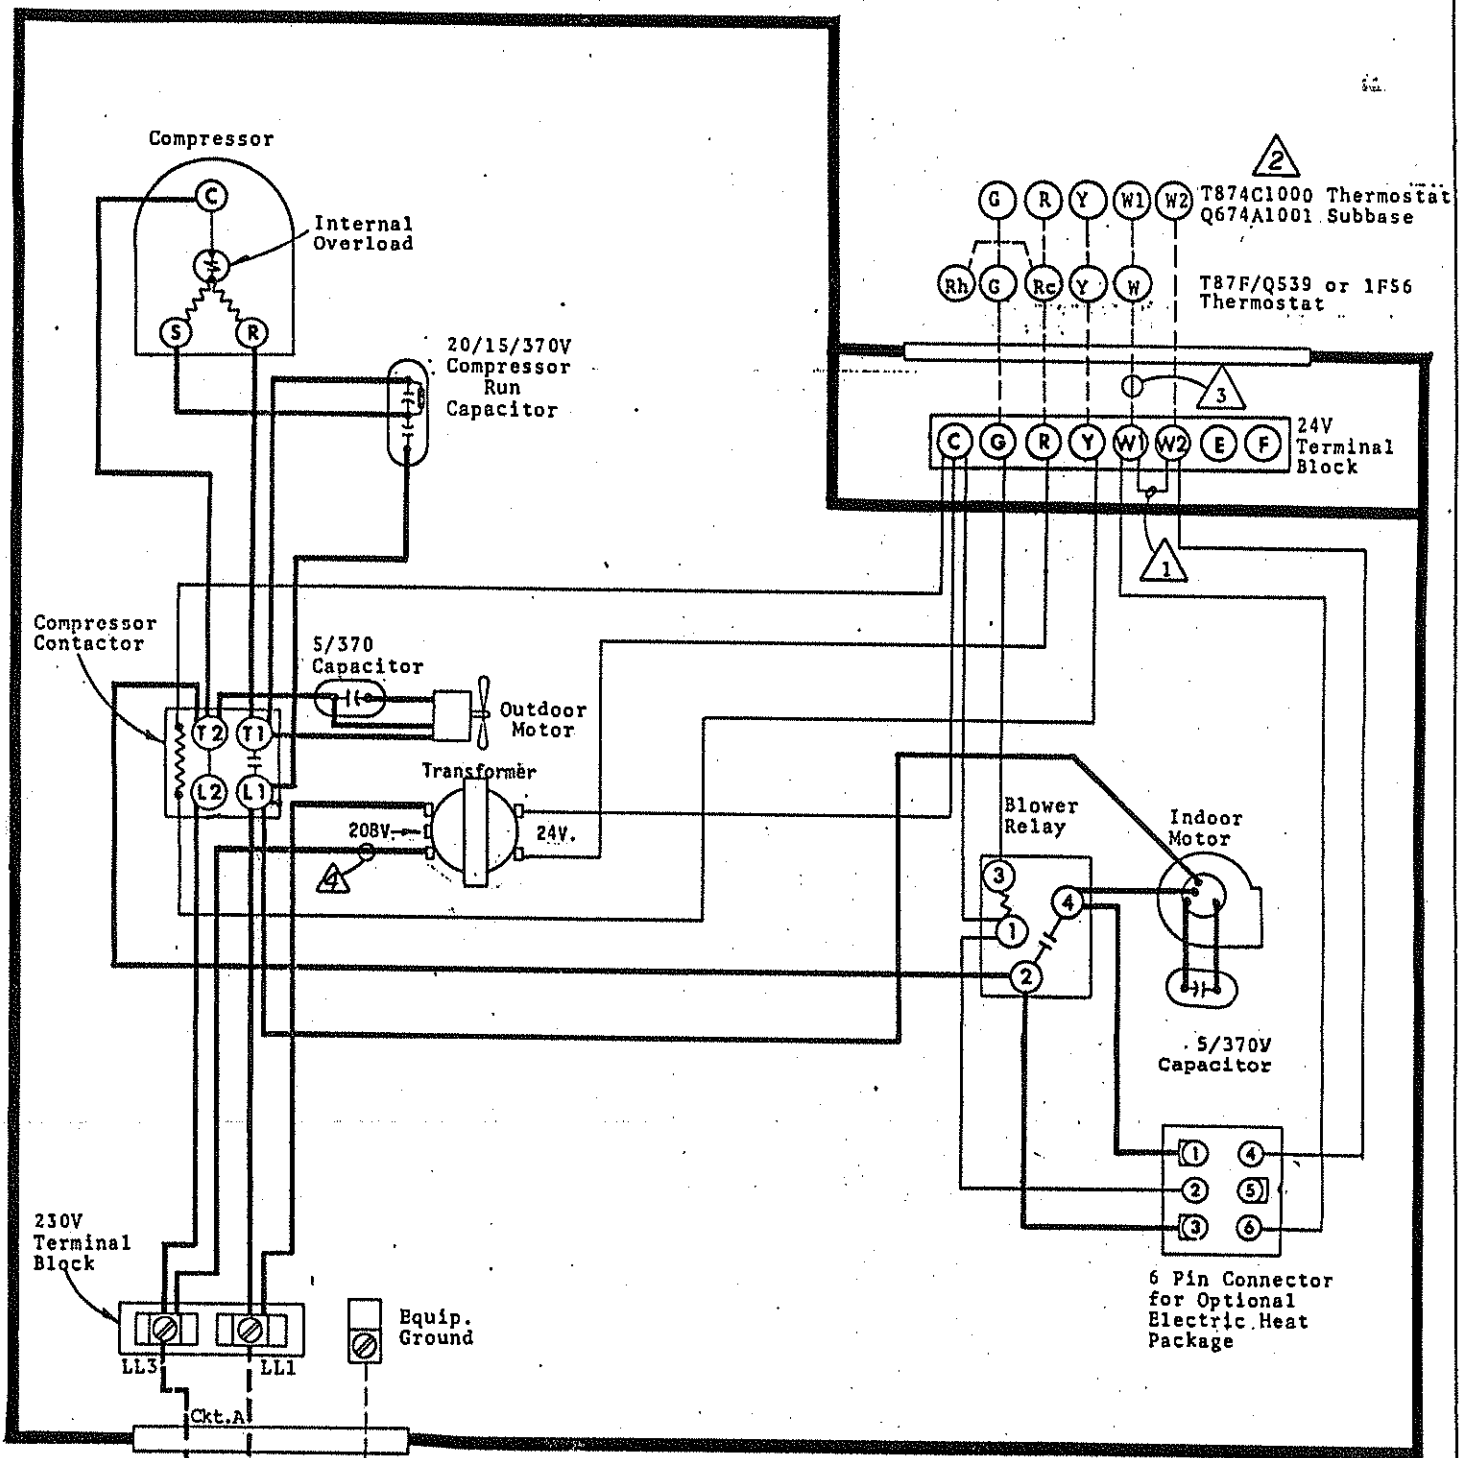


USE COPPER OR ALUMINUM WIRE

	FACTORY WIRING	FIELD WIRING
Low Voltage	—————	-----
High Voltage	—————	-----

- ⚠ Remove jumper for two stage heat.
- ⚠ Required only when optional electric heat package is installed.
- ⚠ Not required when no optional heat packages are used.
- ⚠ For 208V operation move this wire to 208V transformer tap.

230/208-60-1

4058-110F

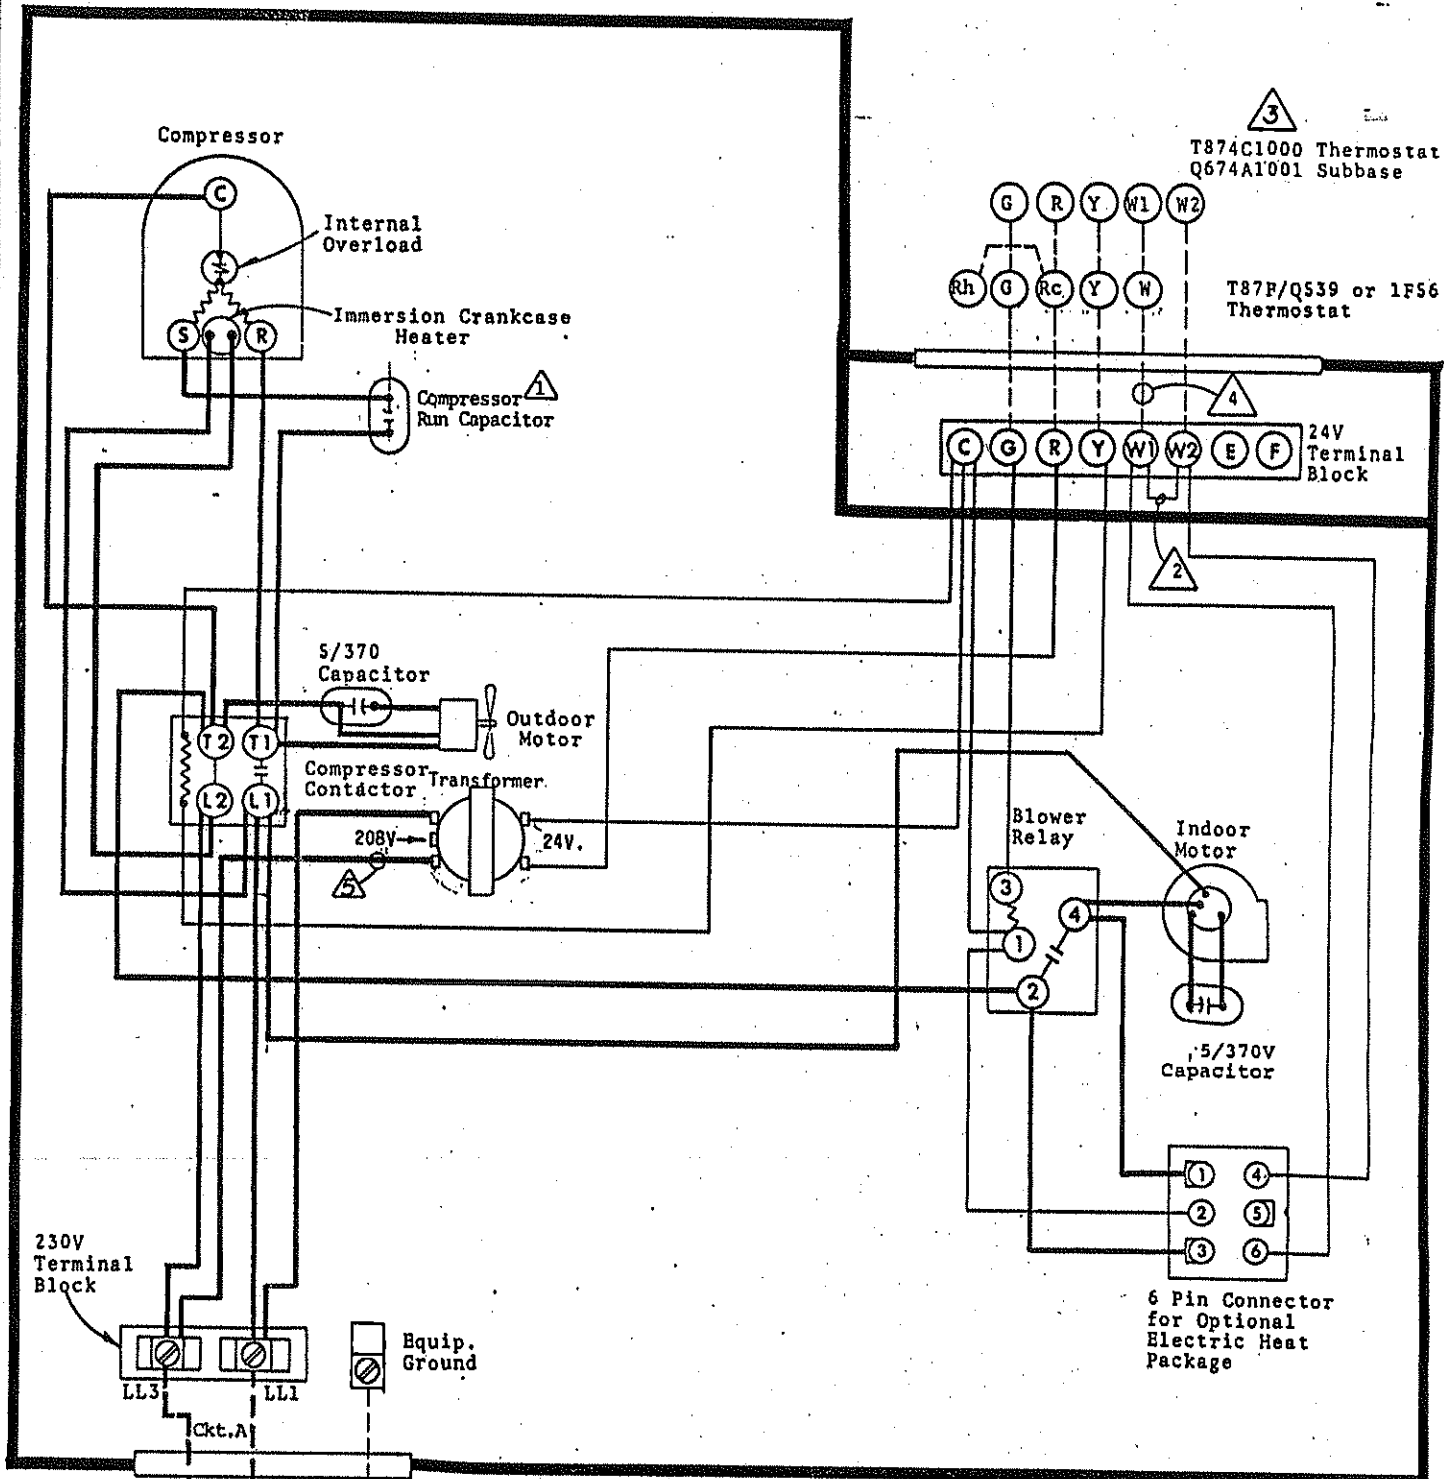


USE COPPER OR ALUMINUM WIRE

	FACTORY WIRING	FIELD WIRING
Low Voltage	————	- - - -
High Voltage	————	- - - -

- ① MU36C - 40/370 CAP. MU42D - 40/440 CAP. ⚠ For 208V operation move this wire to 208V transformer tap.
- ② Remove jumper for two stage heat.
- ③ Required only when optional electric heat package is installed.
- ④ Not required when no optional heat packages are used.

Fused Disconnect Switch

230/208-60-1

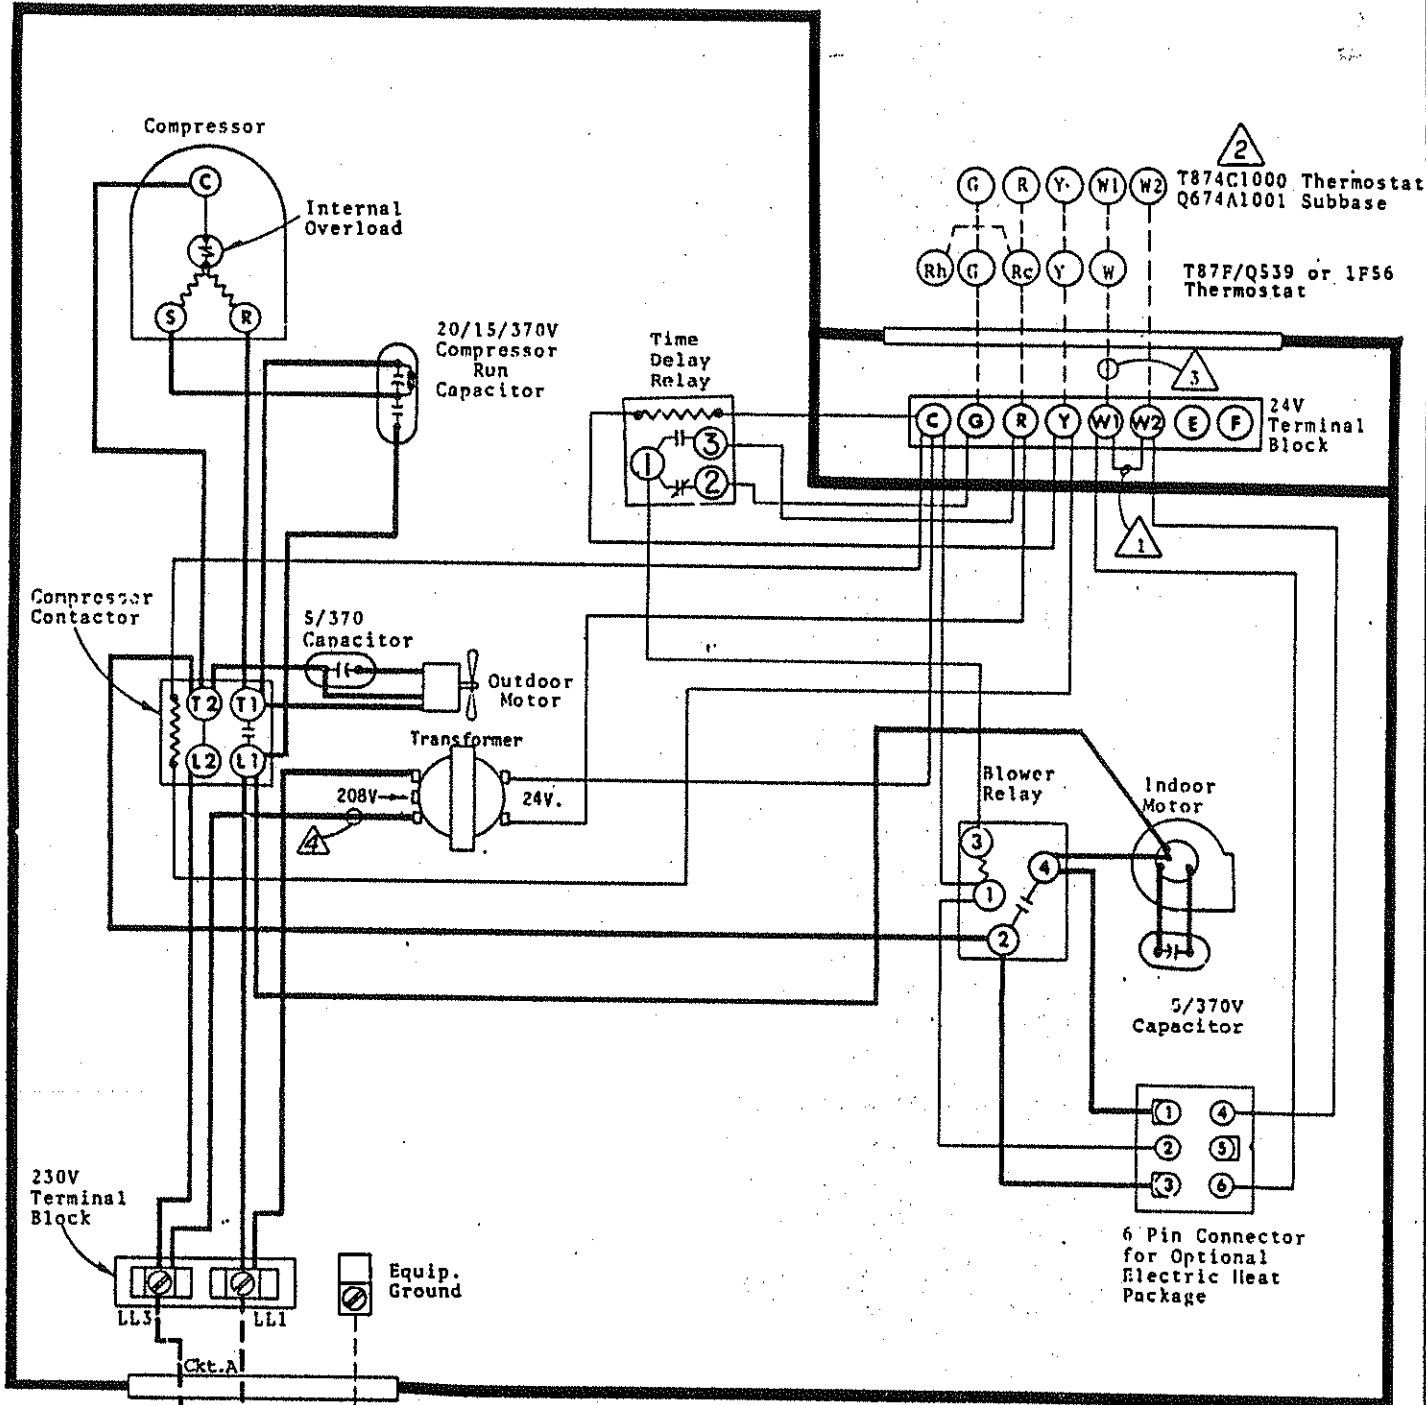

USE COPPER OR ALUMINUM WIRE


	FACTORY WIRING	FIELD WIRING
Low Voltage	————	- - - - -
High Voltage	————	- - - - -

- ⚠ Remove jumper for two stage heat.
- ⚠ Required only for use with optional EH3MA-1-15A and EH3MA-1-20A Heat Packages.
- ⚠ Not required when no optional heat packages are used.
- ⚠ For 208V operation move this wire to 208V transformer tap.

MODEL
MU30A

4058-210D

230/208-60-1

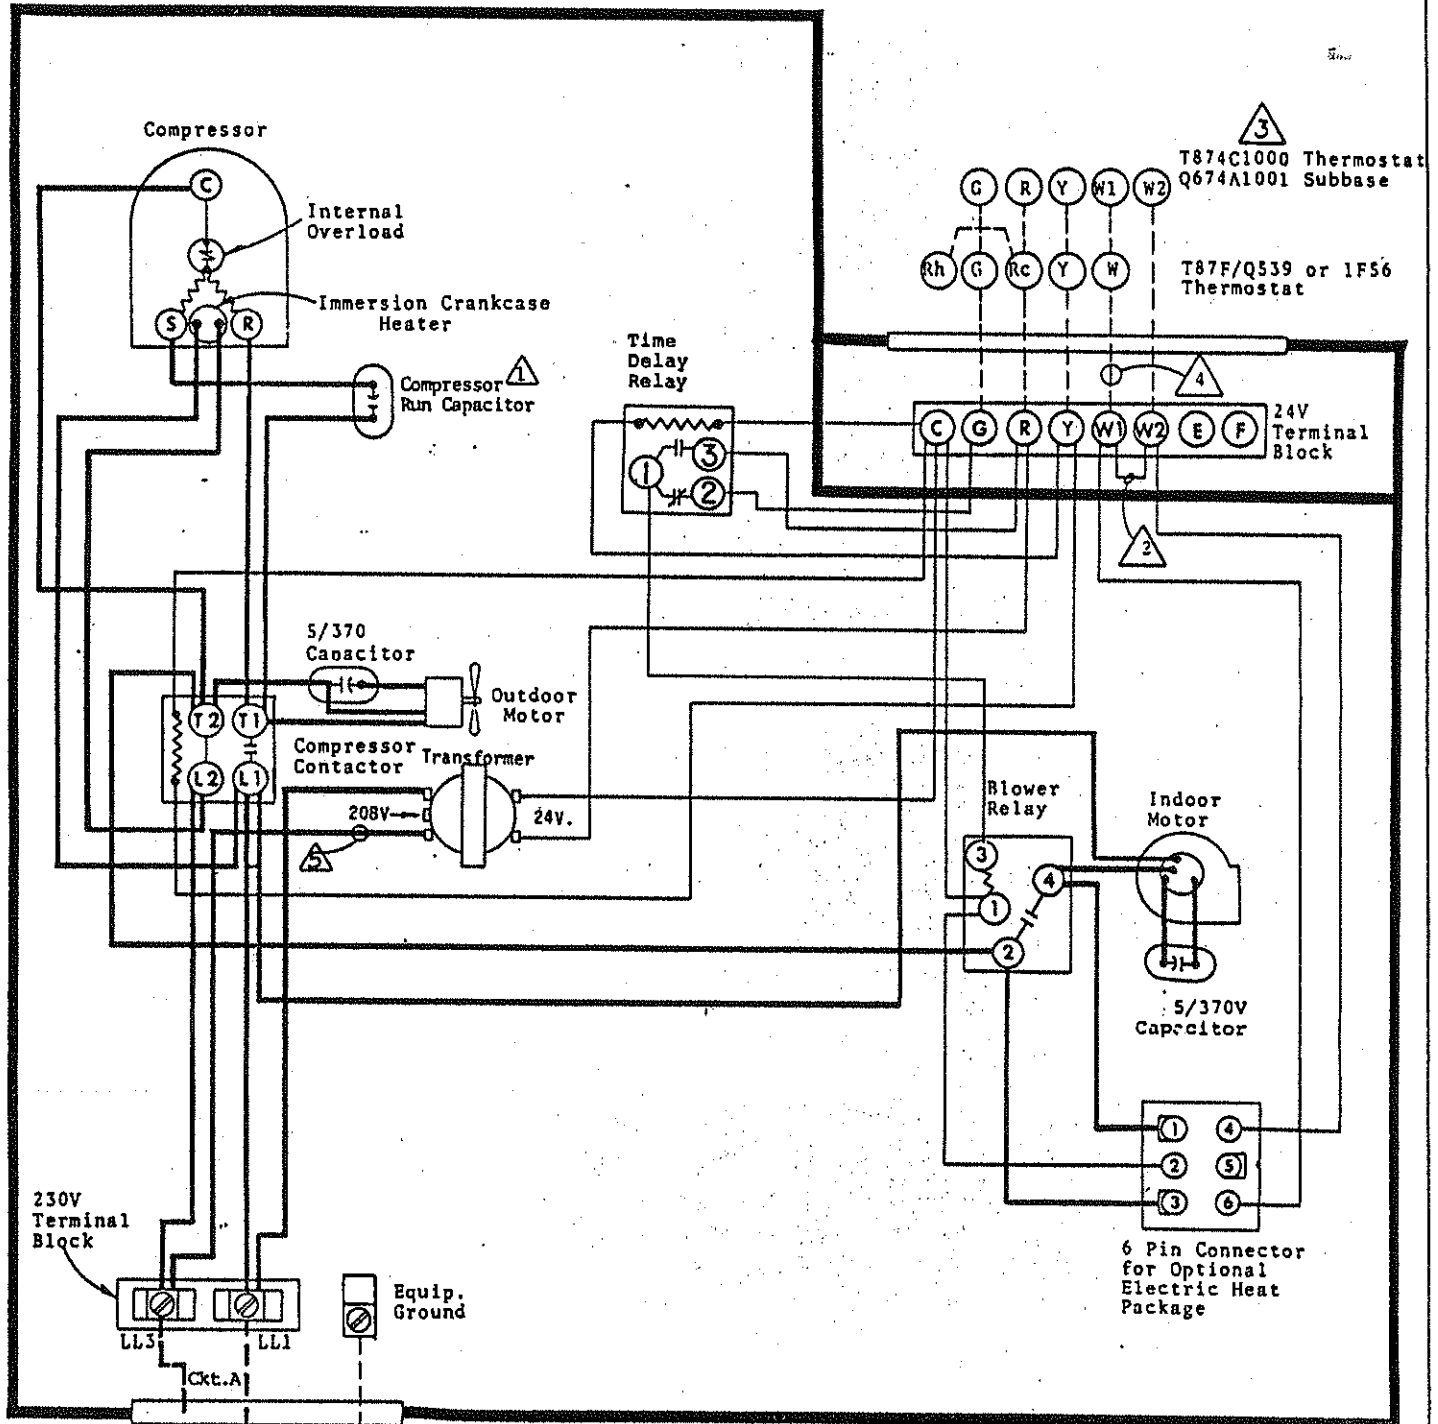

Fused Disconnect Switch

230/208-60-1

USE COPPER OR ALUMINUM WIRE

	FACTORY WIRING	FIELD WIRING
Low Voltage	————	- - - - -
High Voltage	————	————

- ⚠ MU36C - 40/370 CAP. MU42D - 40/440 CAP.
- ⚠ For 208V operation move this wire to 208V transformer tap.
- ⚠ Remove jumper for two stage heat.
- ⚠ Required only for use with optional EH3MA-1-15A and EH3MA-1-20A heat Packages.
- ⚠ Not required when no optional heat packages are used.

MODELS
MU36C, MU42D

4058-220E