

INSTALLATION INSTRUCTIONS

MODELS

MU30A, MU36C, MU42D

PACKAGED AIR CONDITIONERS

FOR RESIDENTIAL, COMMERCIAL,
OR MOBILE HOME
HEATING/COOLING APPLICATIONS

IMPORTANT

The equipment covered in this manual is to be installed by trained, experienced service and installation technicians. Any heat pump is more critical of proper operation, charge and an adequate duct system than a straight air conditioning unit. All ductwork, supply and return, must be properly sized for the design air flow requirement of the equipment. NESCA is an excellent guide to proper sizing. All ductwork or portions thereof not in the conditioned space should be properly insulated in order to both conserve energy and prevent condensation or moisture damage.

SHIPPING DAMAGE

Upon receipt of equipment, the carton should be checked for external signs of shipping damage. If damage is found, the receiving party must contact the last carrier immediately, preferably in writing, requesting inspection by the carrier's agent.

GENERAL

The refrigerant system is completely assembled and charged. All internal wiring is complete.

These instructions explain the recommended method to install the air cooled self-contained unit and the electrical wiring connections to the unit.

These instructions and any instructions packaged with any separate equipment required to make up the entire air conditioning system should be carefully read before beginning the installation. Note particularly "Starting Procedure" and any tags and/or labels attached to the equipment.

While these instructions are intended as a general recommended guide, they do not supersede any national and/or local codes in any way. Authorities having jurisdiction should be consulted before the installation is made.

INSTALLATION

Size of unit for a proposed installation should be based on heat loss calculation made according to methods of National Warm Air Heating and Air Conditioning Association. The air duct should be installed in accordance with the Standards of the National Fire Protection Association for the Installation of Air Conditioning and Ventilating Systems of Other Than Residence Type, NFPA No. 90A, and Residence Type Warm Air Heating and Air Conditioning Systems, NFPA No. 90B. Where local regulations are at a variance with instructions, installer should adhere to local codes.

WIRING - MAIN POWER

Refer to the unit rating plate for wire sizing information and maximum fuse or "NACR Type" circuit breaker size. Each unit is marked with a "Minimum Circuit Ampacity." This means that the field wiring used must be sized to carry that amount of current. Refer to the National Electrical Code for complete current carrying capacity data on the various insulation grades of wiring material.

If an optional heater package is installed, a separate power circuit must be added. Refer to the Electrical Information Chart for circuit information. **DO NOT ATTEMPT TO COMBINE A BASIC UNIT AND A HEATER PACKAGE TO ONE POWER SUPPLY CIRCUIT.**

The unit rating plate lists a "Maximum Time Delay Fuse" or "NACR Type" circuit breaker that is to be used with the equipment. The correct size must be used for proper circuit protection and also to assure that there will be no nuisance tripping due to the momentary high starting current of the compressor motor.

ELECTRICAL INFORMATION								WIRING INFORMATION ^Δ									
Model	Volts/ PH	Optional Heater Package	Max. Unit Amps	No. Field Power Circuits	Optional Heater Internal Fuses	Required ^Δ Over Current Protection		Minimum Circuit Ampacity		Power Circuit Wiring		Ground Wire Size ^Δ					
						CKT. A	CKT. B	CKT. A	CKT. B	CKT. A	CKT. B	CKT. A	CKT. B				
NU30A	230/208 60-1	None	19.3	1		35	10	24	26	10	10	10	10				
		EH3MA-1-5A	23.4	2										60	52	6	10
		EH3MA-1-10A	44.2	2	30/60									80	78	3	8
		EH3MA-1-15A	65.1	2	60									110	104	1	6
NU36C	230/208 60-1	None	22.3	1		40	30	27	26	10	10	10	10				
		EH3MA-1-5A	23.4	2										60	52	6	10
		EH3MA-1-10A	44.2	2	30/60									80	78	3	8
		EH3MA-1-15A	65.1	2	60									110	104	1	6
NU42D	230/208 60-1	None	25.3	1		50	30	31	26	8	10	10	10				
		EH3MA-1-5A	25.3	2										60	52	6	10
		EH3MA-1-10A	44.2	2	30/60									80	78	3	8
		EH3MA-1-15A	65.1	2	60									110	104	1	6

^Δ Time delay fuses or "NACR Type" circuit breakers must be used for 60 and smaller sizes. Standard fuses or circuit breakers are suitable for sizes 70 and larger.

^Δ Based on 60°C copper wire. Other wiring materials must be rated for marked "Minimum Circuit Ampacity" or greater.

^Δ Based upon Table 250-95 of N.E.C., 1981.

UNPACKING THE SELF-CONTAINED UNIT

It is recommended that the unit be unpacked at the installation site to minimize damage due to handling.

1. Cut and remove the metal band from around unit.
2. Remove the carton from the unit.
3. The installation manual is contained in an envelope shipped with the unit. Make sure that it does not get lost.
4. Carefully block up the unit and remove the shipping skid.
5. CAUTION - DO NOT tip the unit on its side. Oil may enter the compressor cylinders and cause starting or operating trouble. If unit has set on its side, restore to upright position and do not run for several hours. Also run intermittently for a few seconds. Do this three or four times with three minutes in between. Observe abnormal compressor noise.

INSTALLING THE SUPPLY AND RETURN FITTINGS ON THE SELF-CONTAINED UNIT

The supply and return fittings are to be fastened with sheet metal screws on three sides. Seal with duct tape on all four sides.

LOCATING AND INSTALLING THE RETURN AIR ASSEMBLY - MOBILE HOME APPLICATION

IMPORTANT

The MU42D unit requires two twelve inch diameter return air ducts. Sufficient airflow for proper system operation is not available using a single return air duct.

To avoid complications, locate and install the return air assembly first. The return air box with grille and filter can be located anywhere in the floor of the mobile home. Keep in mind that the closer to the cooling unit the better because less duct will be needed. Always use at least one 7' length of duct, however, a good spot is under the television set in a corner or under a table or dayport if a minimum two inch clearance is available. If desired, the return opening can be located inside a closet with louvered doors. The return air grille can be placed in the wall of a closet and the air conducted into the filter box through a boxed-in area at the closet floor level. Make sure filter is readily accessible.

After determining the location of the return air opening, start the installation from under the home by cutting a small hole in the fiber underboard to determine how the floor joist location will affect the cutting of the opening needed for the box. Floor joists generally are located on 16" centers leaving 14-3/8" between joists. After measuring the return air box cut the hole so the box will fit between the floor joists. In most installations it will be necessary to cut a similar hole in the fiberboard directly under the one in the floor. However, if the floor is more than 10" deep, it will only be necessary to cut a round hole for the collar on the return air box or for the insulated duct.

Finally, set the box into the opening and fasten with screws or nails. Put the filter and the return air grille in place.

LOCATING AND INSTALLING THE SUPPLY DUCT CONNECTORS MOBILE HOME APPLICATION

When locating the supply duct connector, check carefully for floor joists, axles, wheels and frame members that could interfere with the installation of the connector or with the running of the flexible duct. Ideally, the supply duct connector should be located in the bottom of the main duct, forward of center of the mobile home BUT NOT UNDER A REGISTER.

To locate the center of the duct, first cut a 6" hole in the fiberboard below the duct at the desired location. After locating the duct center, increase the hole in the fiberboard to approximately the size of the connector to be used. Next cut an opening in the bottom of the duct 1/8" larger than the actual dimension of the connector being used. After inserting the connector, bend the tabs flat inside the duct.

It is a good practice to seal all connections with duct tape. Seal the opening in the fiberboard around the duct connector.

For double wide homes or for special applications, these connectors are fed by two flexible ducts.

CONNECTING THE INSULATED RETURN-AIR AND SUPPLY FLEXIBLE DUCTING

All flexible ducts are furnished with a male and female metal end. The ducts can be connected to the corresponding fitting and sheet metal screwed in place. Slide the insulation and outer jacket over the end and use duct tape to seal joints.

If the flexible ducts are long enough, it will be easier to connect them to the fittings on the unit before sliding the unit into place.

RECOMMENDED REGISTER TYPE

Satisfactory heating/cooling of a mobile home will depend greatly on what type register is used. A very open type with no deflection (allowing the air to move straight up) is best. If these are not available, straighten the fins of the present registers as much as possible.

DUCT REQUIREMENTS

THE SUPPLY DUCT SYSTEM, INCLUDING THE NUMBER AND TYPE OF REGISTERS, WILL HAVE MUCH MORE EFFECT ON THE PERFORMANCE OF AN ATR CONDITIONING SYSTEM THAN ANY OTHER FACTOR! The duct must be sufficiently large to conduct an adequate amount of air to each register. The registers must be designed to throw the cooled air up to the ceiling. The duct must be built tightly enough to prevent loss of cooled air to the outside.

IMPORTANT: The MU42D unit requires two twelve inch diameter return air ducts. Sufficient airflow for proper system operation is not available using a single return air duct.

The output delivery of the system will not cool the home if the air is lost to the outside through leaks in the duct system. Also, the duct can be large enough in dimension but too small because it is collapsed or restricted with a foreign object. See chart for airflow and static pressure capabilities.

For rooftop or permanent structure applications, either round pipe or rectangular ductwork can be used, following standard duct sizing and layout techniques.

INDOOR BLOWER PERFORMANCE			
CFM - Dry Coil*			
E.S.P. In. H ₂ O**	MU10A	MU16C	MU42D
.00	1295	1335	1475
.10	1250	1290	1445
.20	1200	1230	1410
.30	1135	1175	1360
.40	1075	1120	1310
.50	1000	1050	1235
.60**	940	980	1160

*CFM with 10kw heaters installed.
**Maximum E.S.P. on heating.
***With 20x20 permanent filter and return air filter box installed.

RATED CFM and E.S.P. (Wet Coil-Cooling)			
Model	Rated CFM	Rated E.S.P.	Recommended Airflow Range
MU10A	1000	.50	900 - 1100
MU16C	1050	.50	945 - 1155
MU42D	1200	.50	1080 - 1320

OPTIONAL ELECTRIC HEATER PACKAGES

Four electric heater packages are available as options. Each package comes complete with heaters and controls. Model numbers of approved electric heat packages are as follows:

EH3MA-1-5A	(5Kw)
EH3MA-1-10A	(10Kw)
EH3MA-1-15A	(15Kw)
EH3MA-1-20A	(20Kw)

IMPORTANT. A separate power entrance is required for the heater package. DO NOT ATTEMPT TO WIRE A BASIC unit and a heater package to one power circuit.

INSTALLATION

Installation of the heat package requires removing the unit blower from its securing slide mount, inserting the heat package into the same mount and reinstalling the unit blower into a similar mount on the heat package. A minimal amount of wiring is required. Refer to the heat package installation instructions for detailed installation information.

WIRING — LOW VOLTAGE, THERMOSTAT

To select the appropriate number of thermostat wires to be run and the correct thermostat, refer to the chart below.

Optional Heater Package	Number of Thermostat Wires Req'd.	Thermostat/Subbase
None	3	T87F-3111/Q539A1220 1P56-318/
EH3MA-1-5A	4	T87F-3111/Q539A1220 1P56-318/
EH3MA-1-10A	4	T87F-3111/Q539A1220 1P56-318/
EH3MA-1-15A	5	T874C1000/Q674A1001
EH3MA-1-20A	5	T874C1000/Q674A1001

PRESSURE SERVICE PORTS

High and low pressure service ports are installed on all units so that the system operating pressures can be observed. Pressure curves can be found later in the manual covering all models. It is imperative to match the correct pressure curve to the unit by model number.

SERVICE HINTS

1. Caution homeowner to maintain clean air filters at all times. Also, not to needlessly close off supply and return air registers. This reduces air flow through the system, which shortens equipment service life as well as increasing operating costs.
2. Check all power fuses or circuit breakers to be sure that they are the correct rating.
3. Periodic cleaning of the outdoor coil to permit full and unrestricted airflow circulation is essential.

IMPORTANT INSTALLER NOTE

For improved start-up performance wash the indoor coil with a dishwasher detergent.

REFRIGERANT CHARGE

The correct system R-22 charge is shown on the unit rating plate. Optimum unit performance will occur with a refrigerant charge resulting in a suction line temperature (6" from compressor) as shown in the following table:

Model	Rated Airflow	95°F O.D. Temperature	82°F O.D. Temperature
MU3DA	1000	49 - 51	63 - 65
MU36C	1050	57 - 59	63 - 65
MU42D	1200	59 - 61	64 - 66

The above suction line temperatures are based upon 80°F dry bulb/67°F wet bulb (50% R.H.) temperature and rated airflow across the evaporator during cooling cycle.

CRANKCASE HEATERS

All units are provided with some form of compressor crankcase heat. Some single phase units utilize the compressor motor start winding in series with a portion of the run capacitor to generate heat within the compressor shell to prevent liquid refrigerant migration.

Some single phase models have an insertion well-type heater located in the lower section of the compressor housing. This is a self-regulating type heater that draws only enough power to maintain the compressor at a safe temperature.

Some form of crankcase heat is essential to prevent liquid refrigerant from migrating to the compressor, causing oil pump out on compressor start-up and possible valve failure due to compressing a liquid.

Refer to wiring diagram to find exact type of crankcase heater used.

The following decal is affixed to all outdoor units detailing start-up procedure. This is very important. Please read carefully.

IMPORTANT

THESE PROCEDURES MUST BE FOLLOWED AT INITIAL START-UP AND AT ANY TIME POWER HAS BEEN REMOVED FOR 12 HOURS OR LONGER.

TO PREVENT COMPRESSION DAMAGE WHICH MAY RESULT FROM THE PRESENCE OF LIQUID REFRIGERANT IN THE COMPRESSOR CRANKCASE:

1. MAKE CERTAIN THE ROOM THERMO-STAT IS IN THE OFF POSITION (THE COMPRESSOR IS NOT TO OPERATE)


2. APPLY POWER BY CLOSING THE SYSTEM DISCONNECT SWITCH (THESE UNITS USE THE COMPRESSOR HEATER WHICH EVAPORATES THE LIQUID REFRIGERANT IN THE CRANKCASE)

3. ALLOW 5 MINUTES FOR THE HEATER TO WARM UP THE OIL. (THIS TIME IS NOT NECESSARY IF THE UNIT HAS BEEN RUN RECENTLY)

4. AFTER 5 MINUTES, CHECK THE THERMISTAT MAY BE SET TO RUN THE CLIMATE CONTROL

EXCEPT AS REQUIRED FOR SAFETY WHEN TRIPPING A UNIT, DO NOT OPEN SYSTEMS TO THE AIR


**TYPICAL MDS04, MDS6C
SINGLE SUPPLY DUCT SYSTEM**

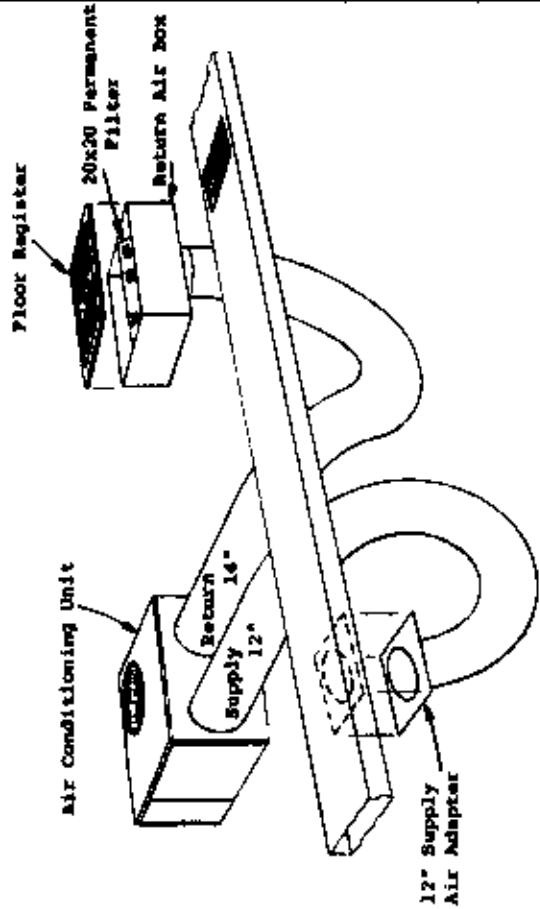

- QTY. 1** 7001-014 Fitting Pack
 (1) 12 1/4 x 20 x 10 1/4 Return Air Box
 (1) 20 x 20 Permanent Filter
 (1) 12 x 20 Floor Register
 (1) 12" Supply Air Adapter

NOTE: Flex Ducts are not supplied as part of the basic unit (field supplied).


**OPTIONAL MDS04, MDS6C
DOUBLE SUPPLY DUCT SYSTEM**

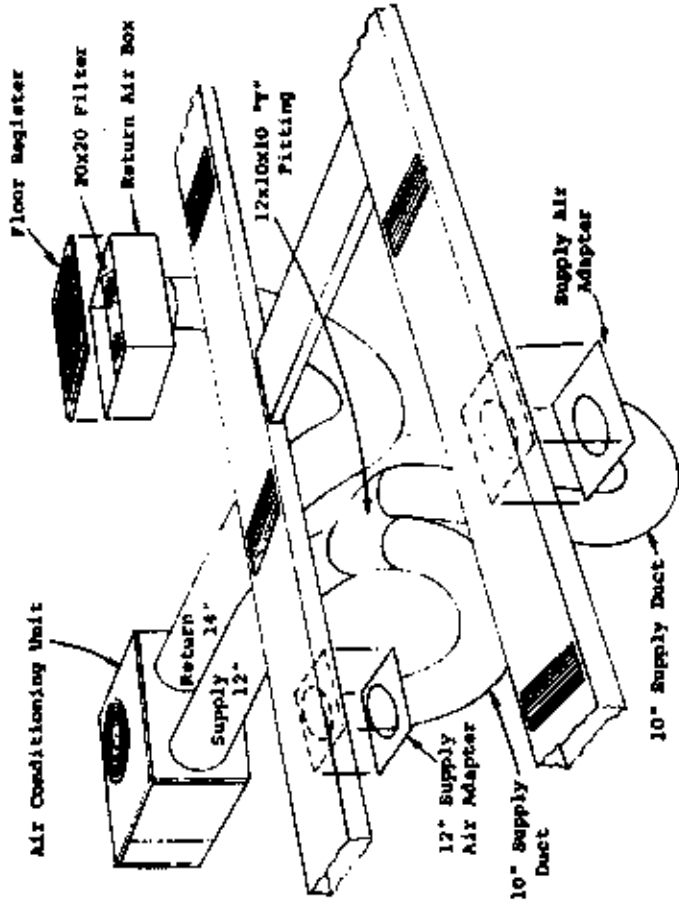

- QTY. 1** 7001-014 Fitting Pack
 (2) 12 1/4 x 20 x 10 1/4 Return Air Box
 (1) 20 x 20 Permanent Filter
 (1) 12 x 20 Floor Register
 (1) 12" Supply Air Adapter
- QTY. 1** 7001-015 Fitting Pack
 (2) 12 x 10 x 10 "Y" Fitting
 (2) 10" Supply Air Adapter

NOTE: Flex Ducts are not supplied as part of the basic unit (field supplied).

**OPTIONAL MAX2D
DOUBLE SUPPLY DUCT SYSTEM**

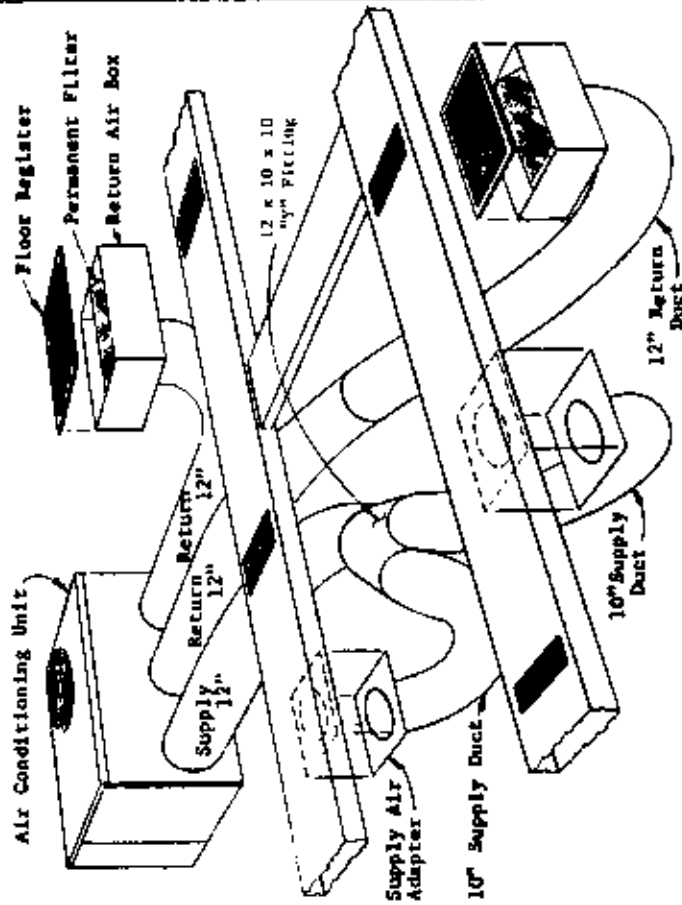


- Qty. 2** 7001-014 Fitting Pack
 (1) 12 1/4 x 20 x 10 1/2 Return Air Box
 (1) 20 x 20 Permanent Filter
 (1) 12 x 20 Floor Register
 (1) 12" Supply Air Adapter

- Qty. 1** 7001-015 Fitting Pack
 (1) 12 x 10 x 10 "Y" Fitting
 (2) 10" Supply Air Adapter

IMPORTANT: Two 12 inch diameter return air ducts must be installed. Ducts are not supplied as part of the basic unit (field supplied).

**TYPICAL MAX2D
SINGLE SUPPLY DUCT SYSTEM**

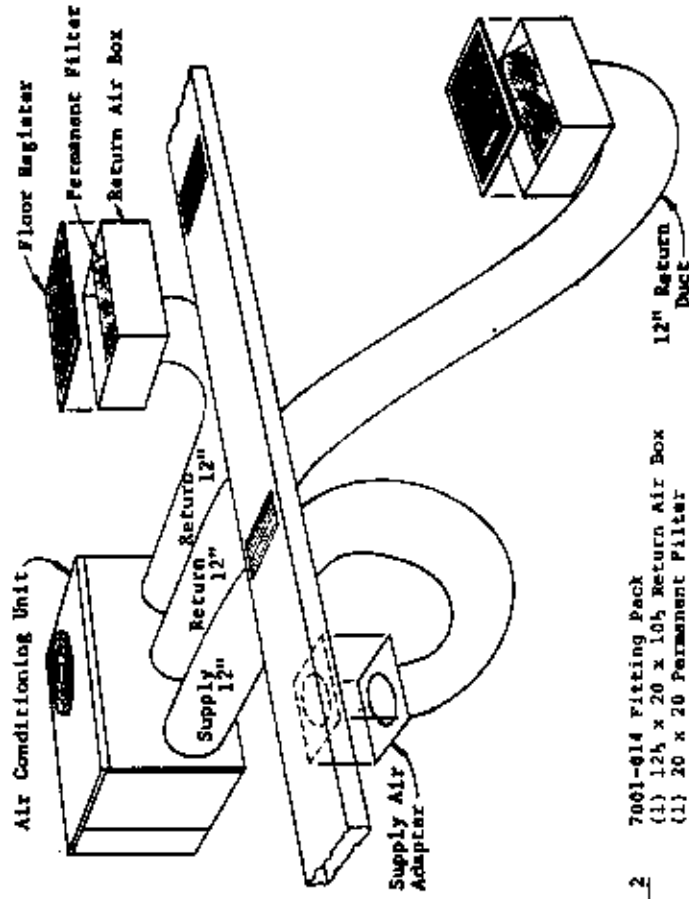


- Qty. 2** 7001-014 Fitting Pack
 (1) 12 1/4 x 20 x 10 1/2 Return Air Box
 (1) 20 x 20 Permanent Filter
 (1) 12 x 20 Floor Register
 (1) 12" Supply Air Adapter

IMPORTANT: Two 12 inch diameter return air ducts must be installed. Ducts are not supplied as part of the basic unit (field supplied).


These curves are based upon 80°DB, 67°WB R.A. Temp. and Rated CFM (airflow) across the evaporator coil and should be used for reference purposes only. Special information can be found under section titled "Refrigerant Charge" elsewhere in manual. If there is any doubt as to correct operating charge being in the system, the charge should be removed, system evacuated, and recharged according to section titled "Refrigerant Charge".

LOW SIDE PRESSURE--PSIG
(SUCTION LINE)

HIGH SIDE (DISCHARGE LINE) PRESSURE--PSIG

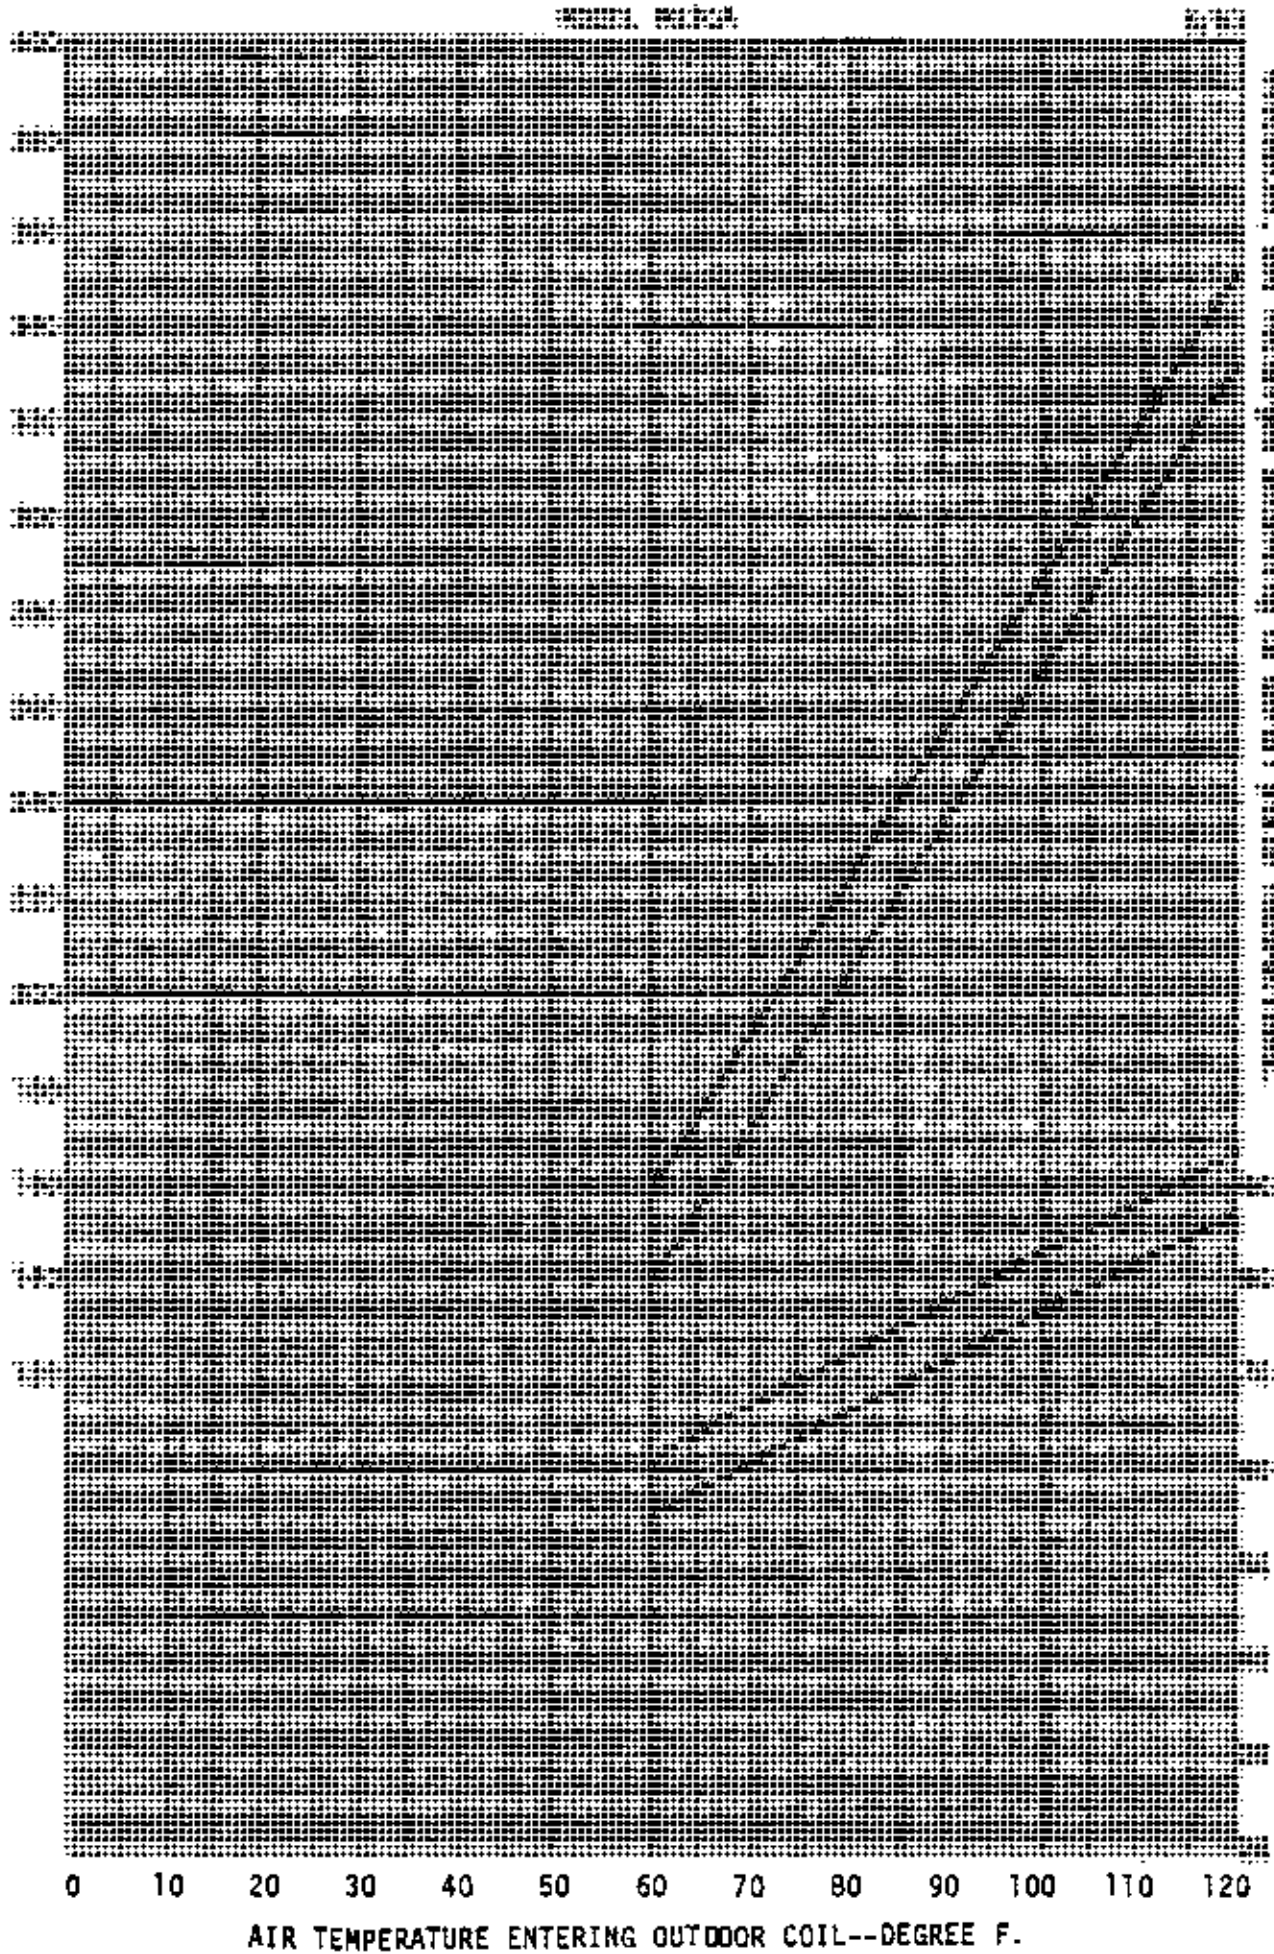

AIR TEMPERATURE ENTERING OUTDOOR COIL--DEGREE F.

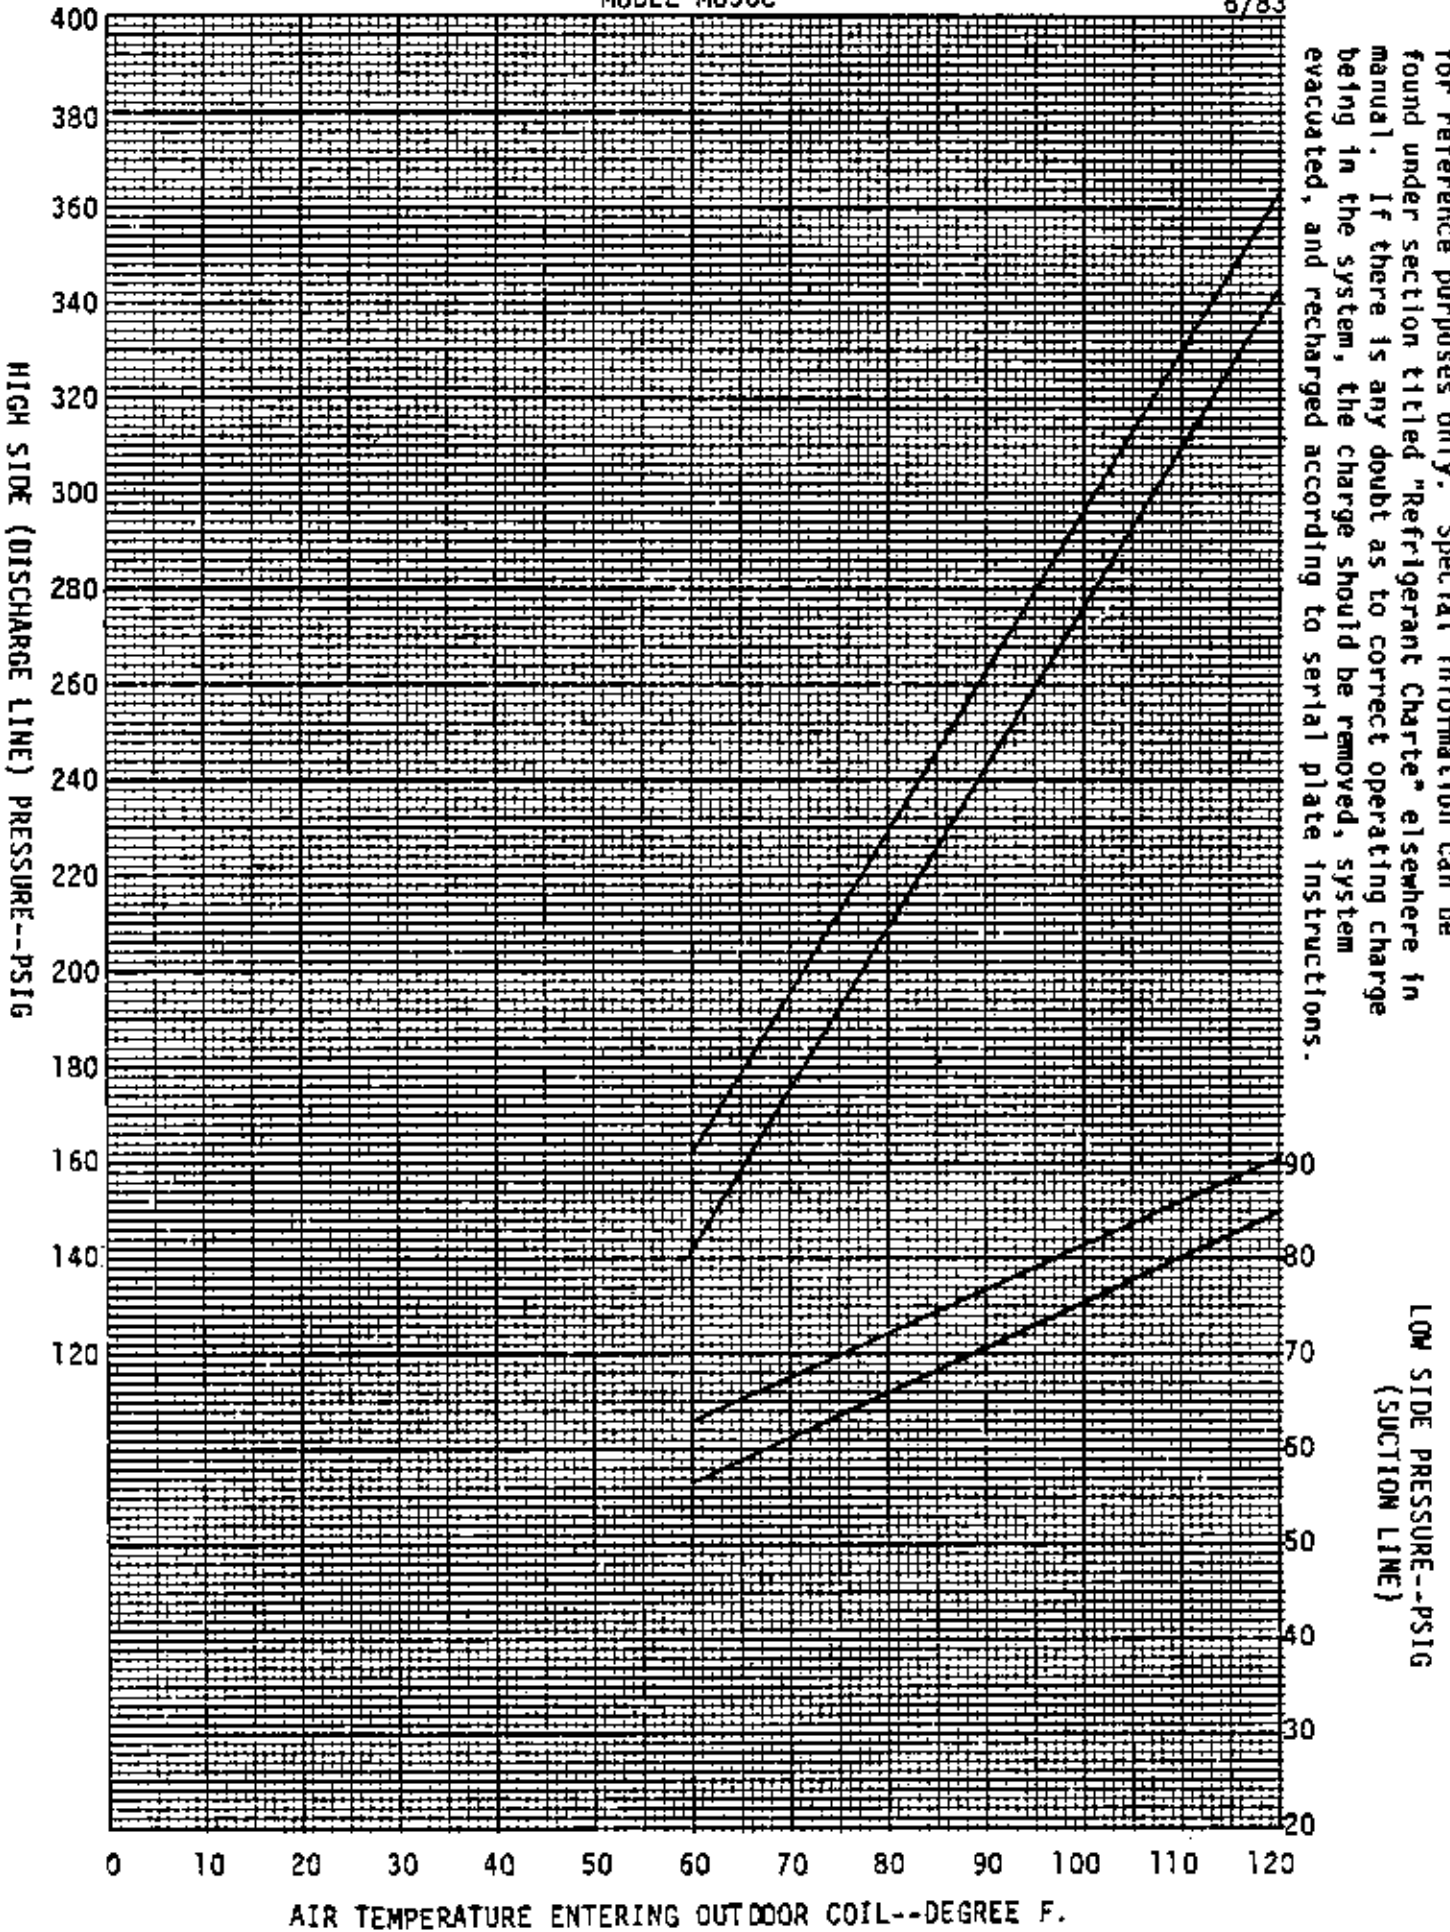


The curves are based upon 80°DB, 67°WB R.A. Temp. and 100 CFM flow across the evaporator coil and should be used for reference purposes only. Special information can be found under section titled "Refrigerant Charge" elsewhere in manual. If there is any doubt as to correct operating charge being in the system, the charge should be removed, system evacuated, and recharged according to serial plate instructions.

LOW SIDE PRESSURE--PSIG
(SUCTION LINE)

HIGH SIDE (DISCHARGE LINE) PRESSURE--PSIG

AIR TEMPERATURE ENTERING OUTDOOR COIL--DEGREE F.

These curves are based upon 80°F, 67°WB R.A. Temp. and Rated CFM (air-flow) across the evaporator coil and should be used for reference purposes only. Special information can be found under section titled "Refrigerant Charge" elsewhere in manual. If there is any doubt as to correct operating charge being in the system, the charge should be removed, system evacuated, and recharged according to serial plate instructions.

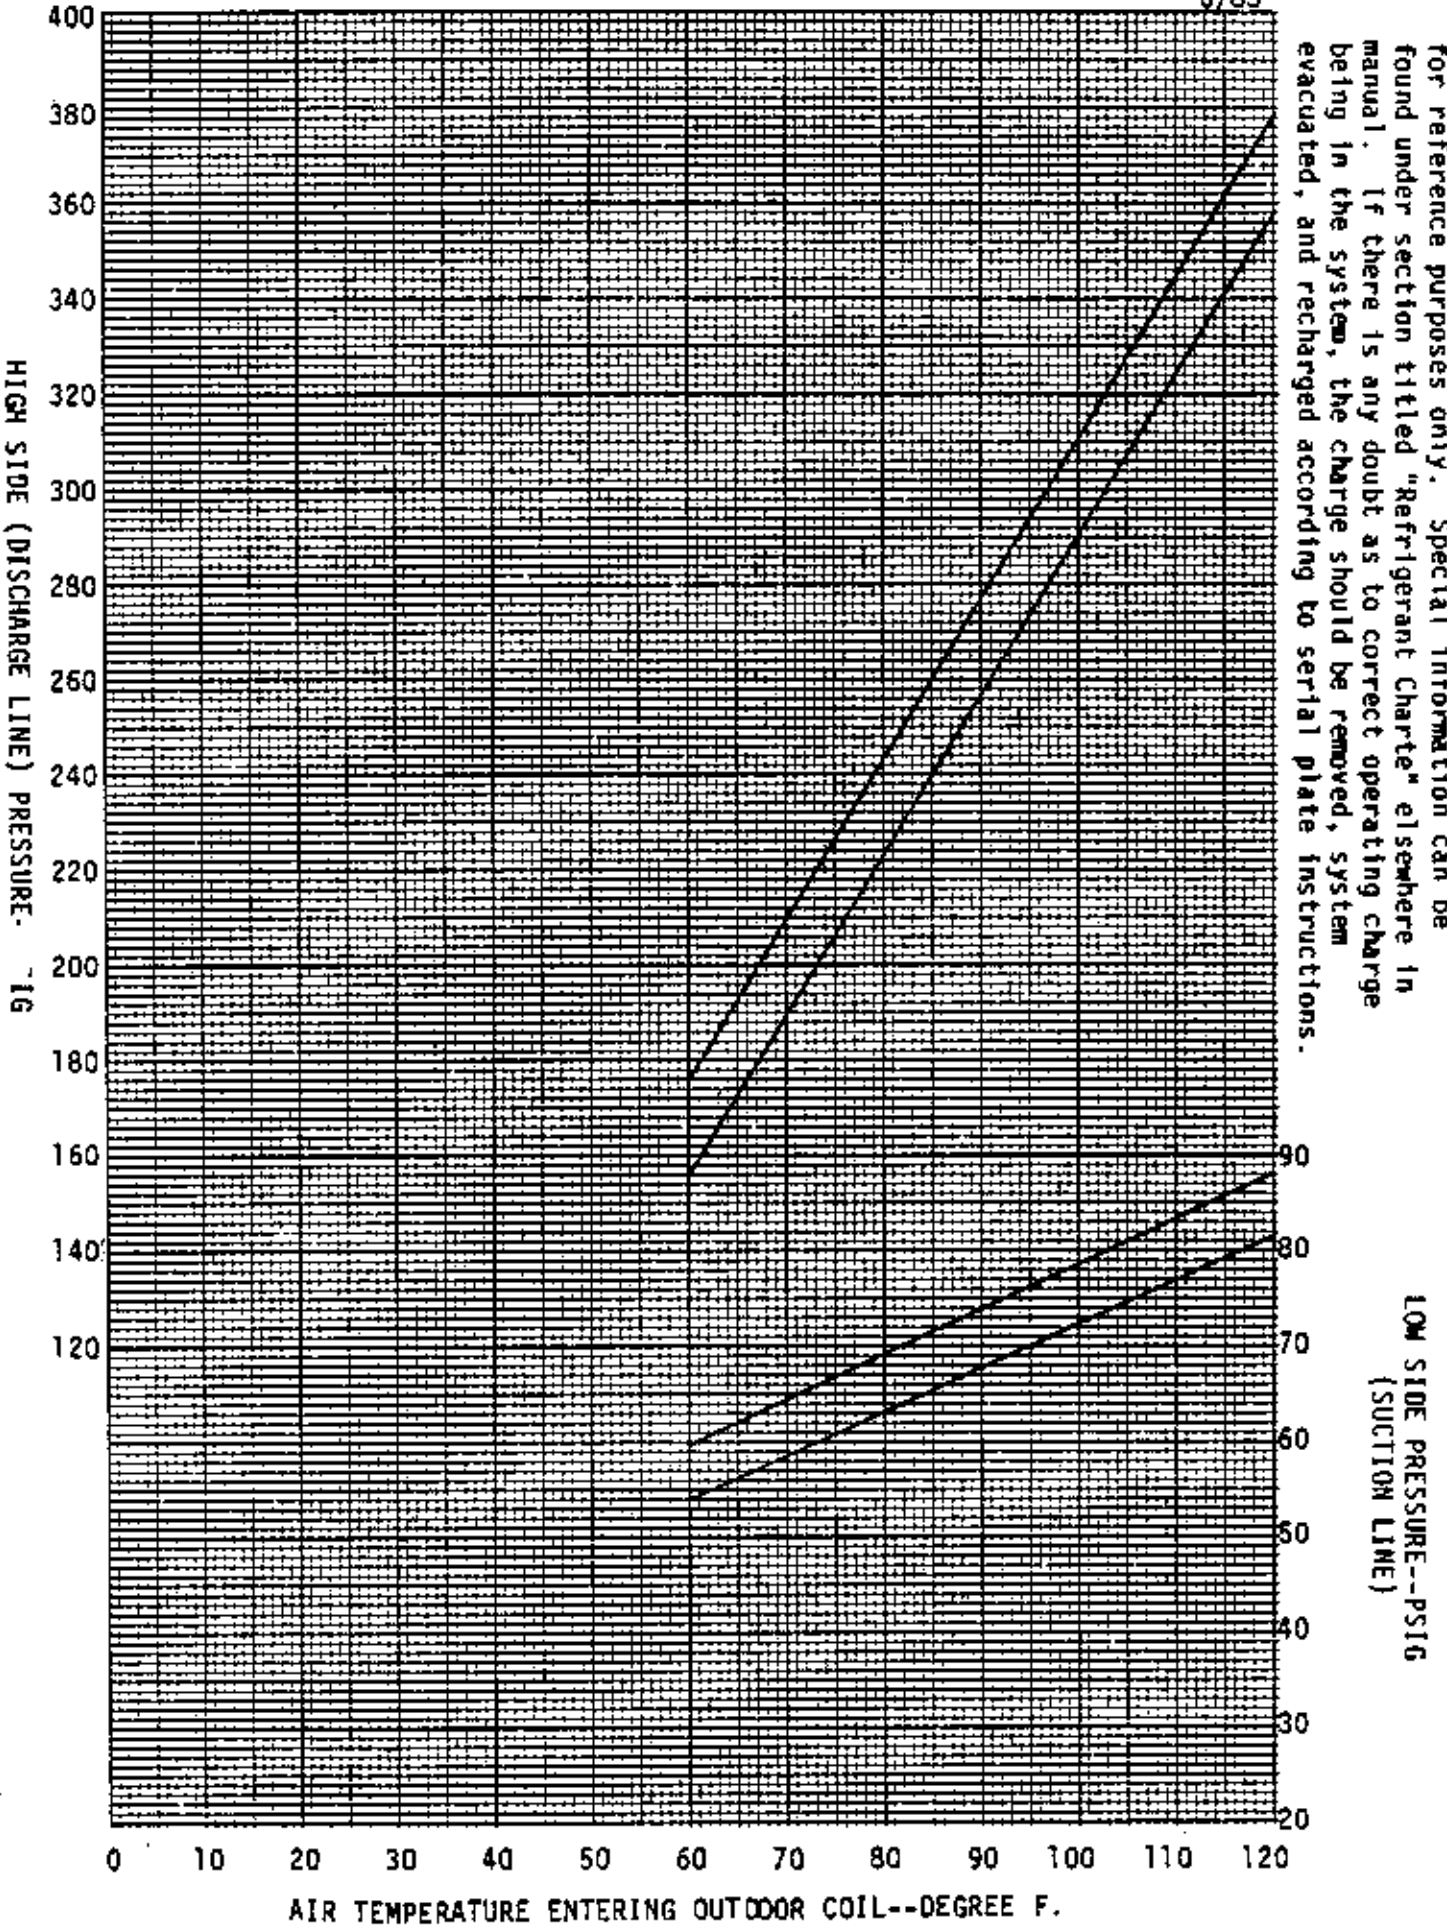

LOW SIDE PRESSURE--PSIG
(SUCTION LINE)

AIR TEMPERATURE ENTERING OUTDOOR COIL--DEGREE F.

PARTS LIST
SINGLE PACKAGE AIR CONDITIONERS


PART NO.	DESCRIPTION	MU30A	MU36C	MU42D
*	Blower Housing 10-8	x	x	x
5152-013	Blower Wheel DD10-8A	x	x	x
8552-007	Capacitor 20/15-370V	x		
8552-035	Capacitor 40/370V		x	
8552-030	Capacitor 40/440V			x
8552-002	Capacitor 5/370V	x	x	x
5811-031	Capillary Tube - Cool	(3)	(4)	(4)
8000-070	Compressor AB233HT	x		
8000-055	Compressor CRH3-0275		x	
8000-063	Compressor CRK3-0325			x
5051-032	Condenser Coil	x	x	x
8401-007	Contactator TP25A	x	x	x
5060-015	Evaporator Coil	x		
5060-033	Evaporator Coil		x	
5060-030	Evaporator Coil			x
5151-028	Fan Blade Y10H9.5-2028	x	x	x
7051-014	Fan Guard	x	x	x
8105-024	Motor - Blower 1/3 hp	x	x	x
8105-023	Motor - Fan 1/3	x	x	x
8200-003	Motor Mount - Blower	x	x	x
8200-022	Motor Mount - Fan	x	x	x
5451-011	Motor Mounting Parts	x	x	x
5451-009	Motor Mounting Parts	x	x	x
5153-022	Rain Shield	x	x	x
5210-006	Strainer		x	x
5210-003	Strainer	x		
* 8607-013	Terminal Block	x	x	x
8607-006	Terminal Board	x	x	x
* 8407-034	Transformer 40VA	x	x	x
7051-016	Wire Grille	x	x	x
8201-008	Relay - Blower	x	x	x

*Please order by model number.

**Denotes change

Minimum net billing \$15.00. Supersedes all previous lists.

Subject to change without notice.

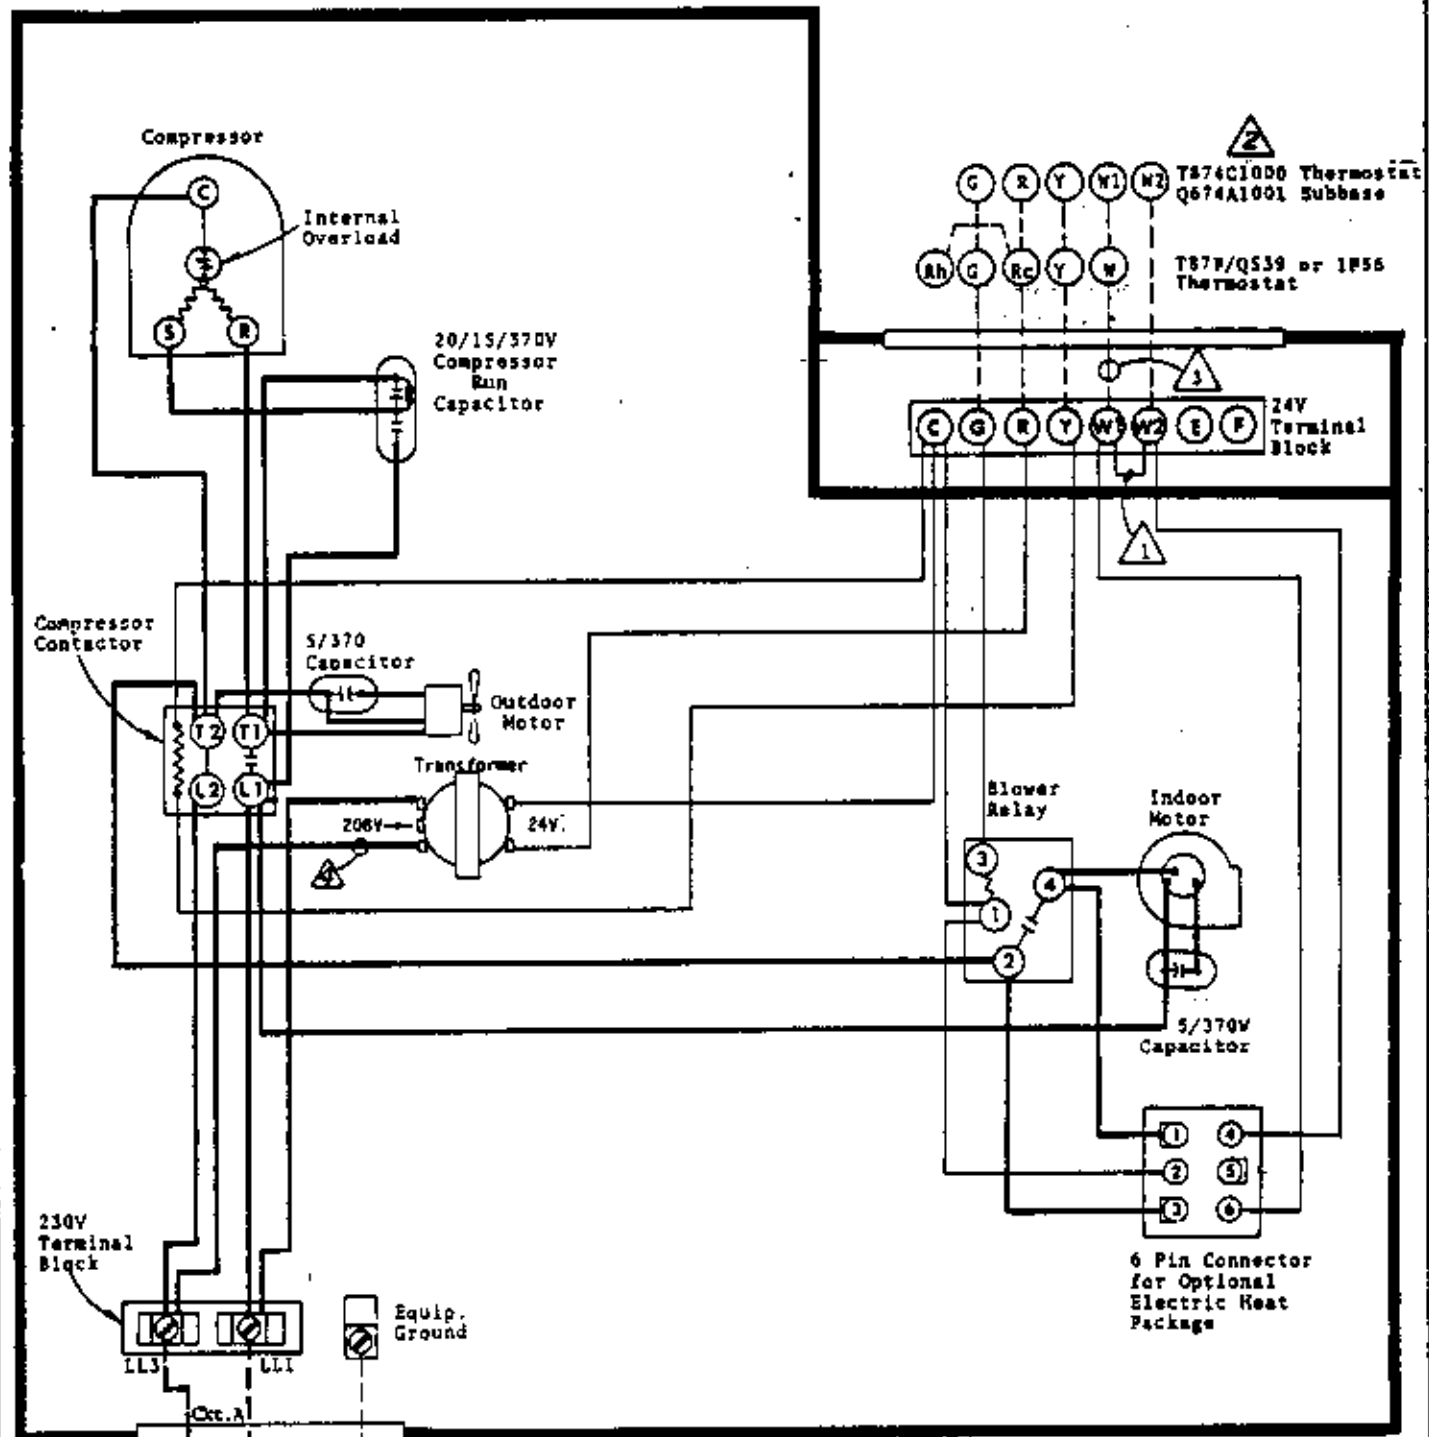

Fused Disconnect Switch

230/208-80-1


USE COPPER OR ALUMINUM WIRE

	FACTORY WIRING	FIELD WIRING
Low Voltage	————	- - - - -
High Voltage	————	- - - - -

- ⚠ Remove jumper for two stage heat.
- ⚠ Required only for use with optional EHSMA-1-15A and EHSMA-1-20A Heat Packages.
- ⚠ Not required when no optional heat packages are used.
- ⚠ For 208V operation move this wire to 208V transformer tap.

MODEL MU30A

4058-1100

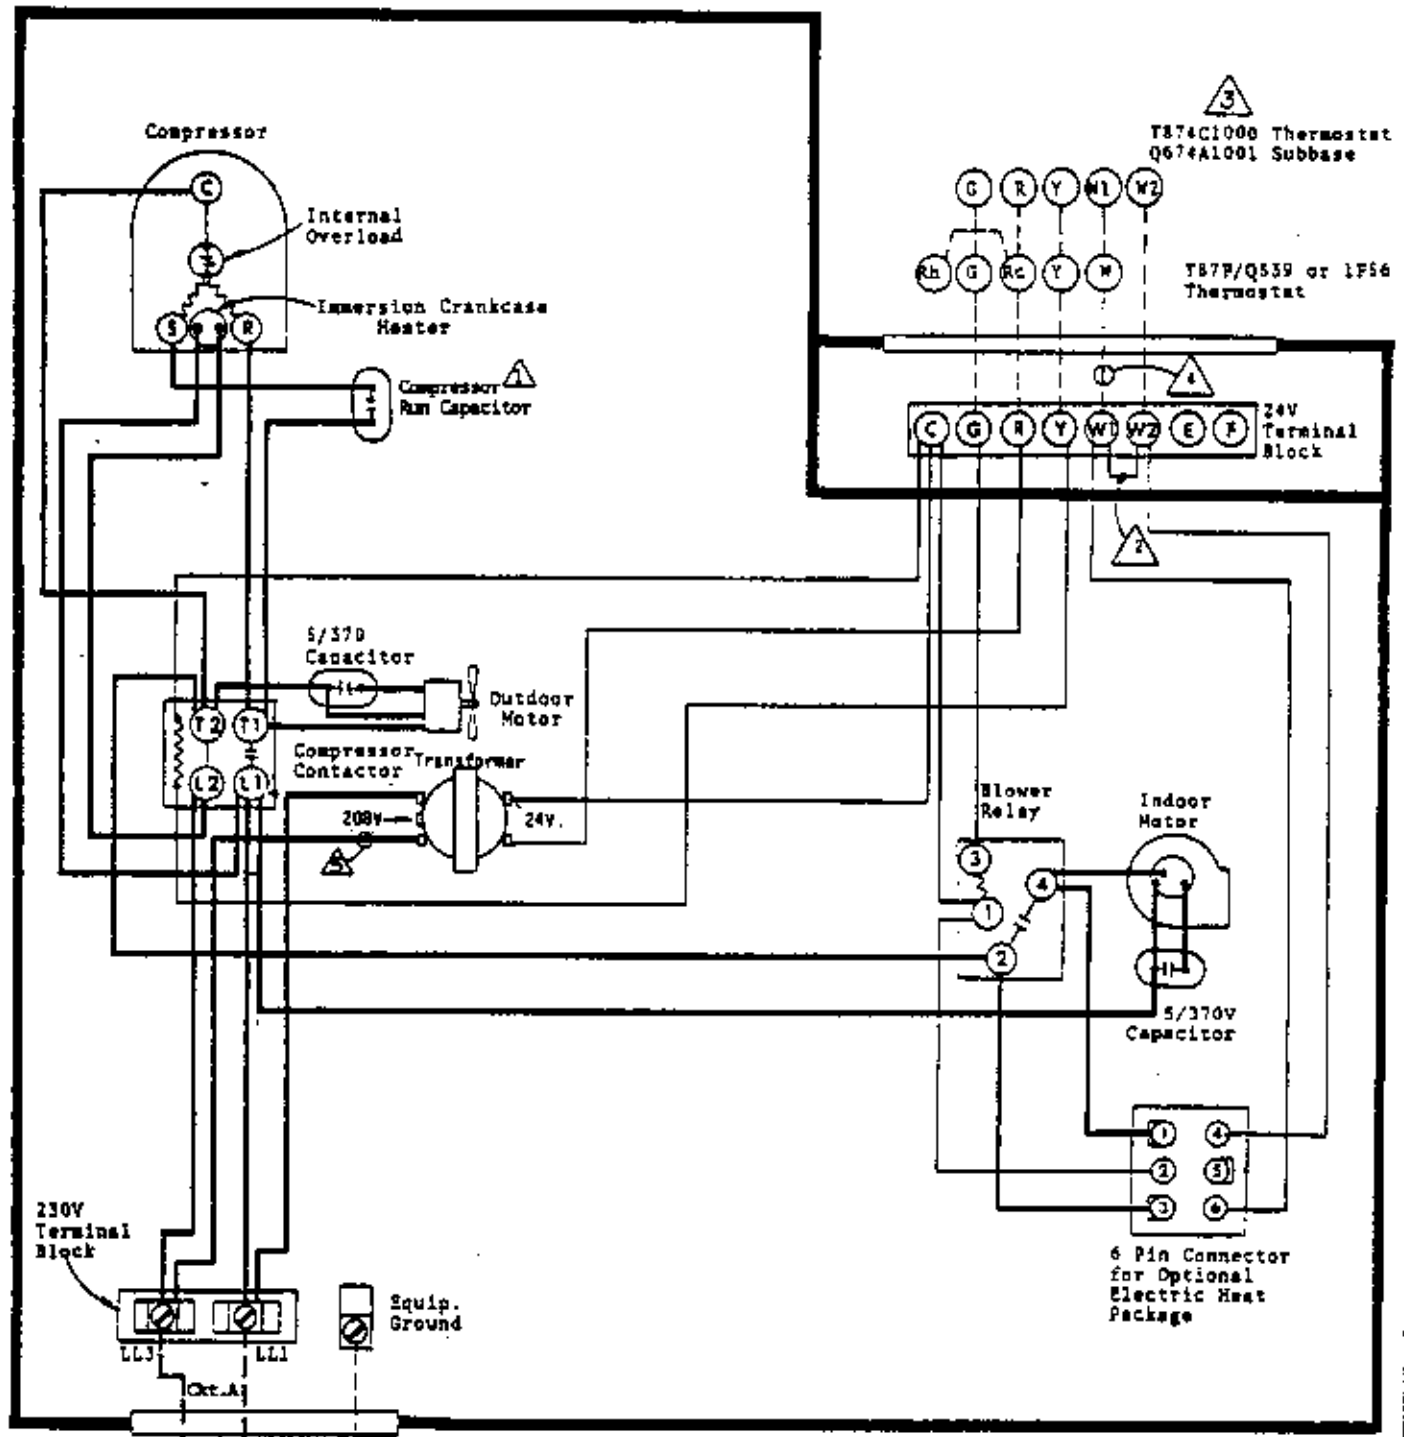

230V Terminal Block

LL3 LL1

Equip. Ground

Out. A1

Fused Disconnect Switch

230/208-60-1


USE COPPER OR ALUMINUM WIRE

	FACTORY WIRING	FIELD WIRING
Low Voltage	————	- - - -
High Voltage	————	- - - -

- ⚠ MU36C - 40/370 CAP. ⚠ For 208V operation move this wire to 208V transformer tap.
- ⚠ MU42D - 40/440 CAP.
- ⚠ Remove jumper for two stage heat.
- ⚠ Required only for use with optional EHSMA-1-15A and EHSMA-1-20A Heat Packages.
- ⚠ Not required when no optional heat packages are used.

MODEL 8
MU36C, MU42D

4058-120 E

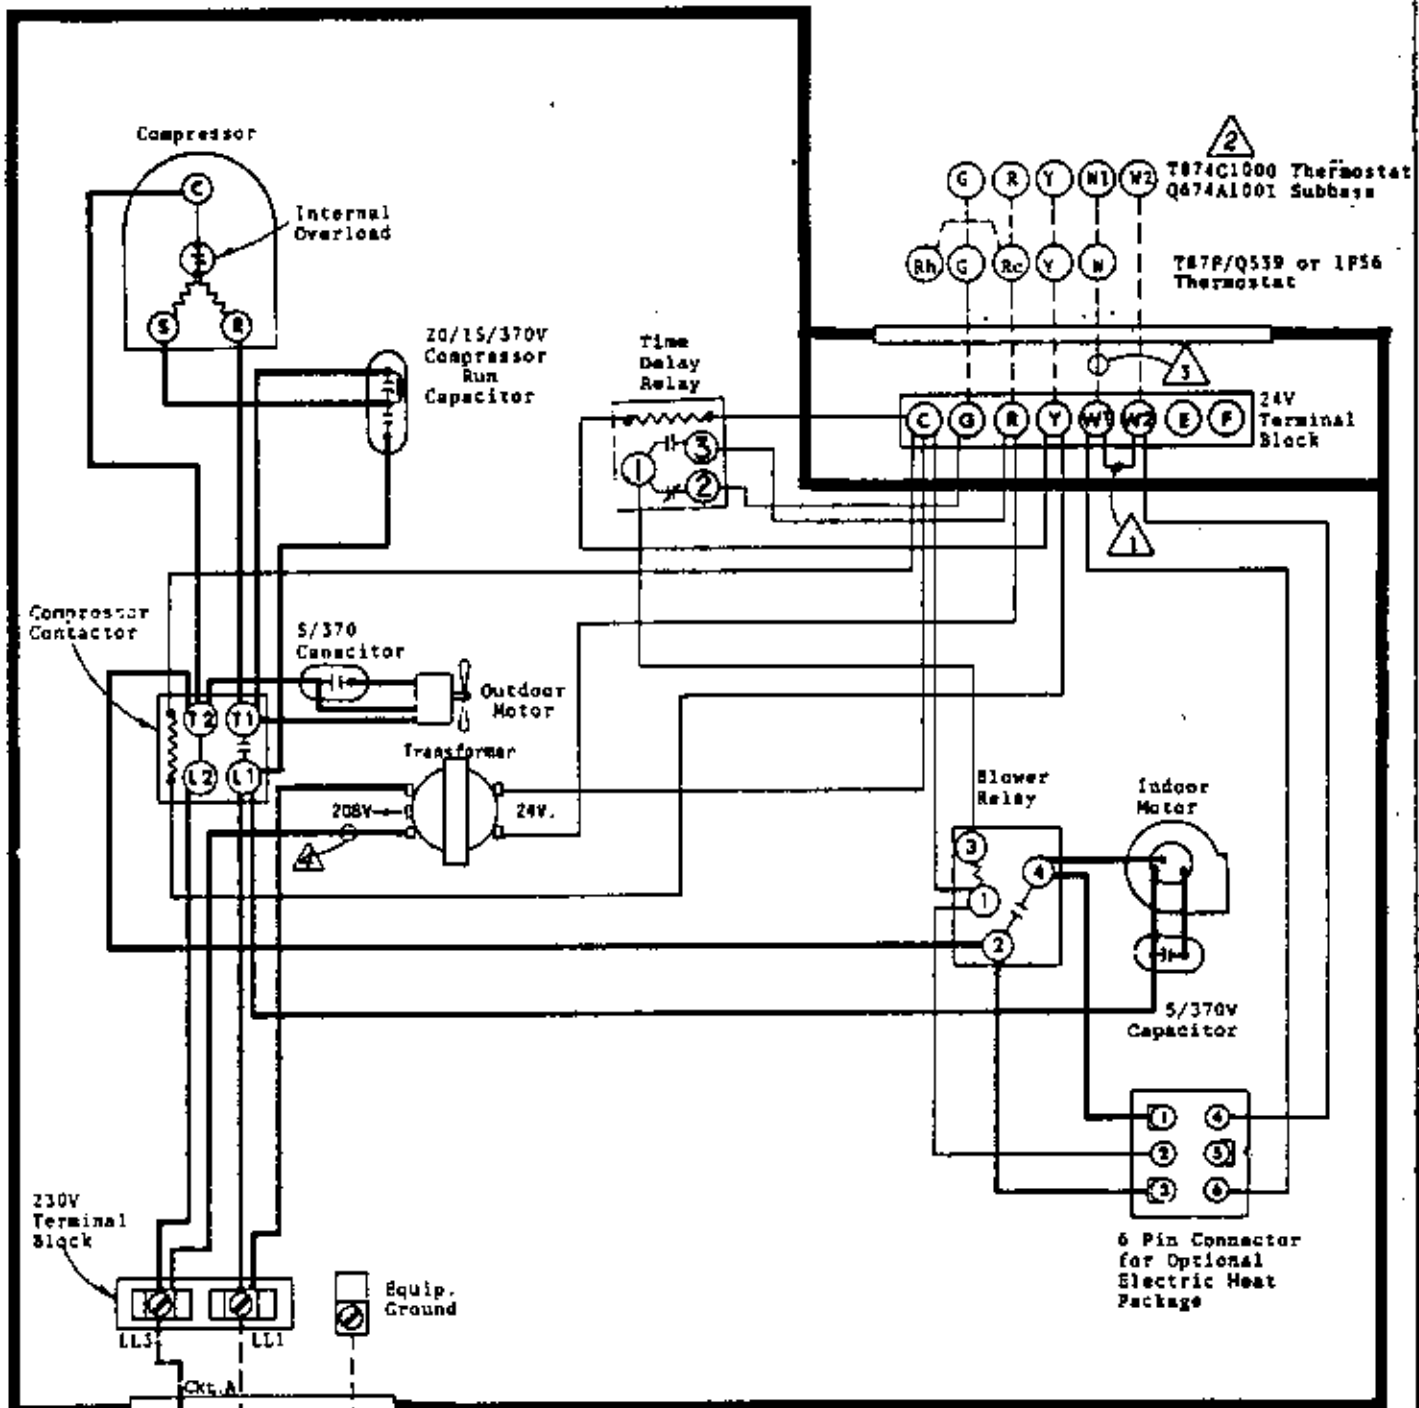

Fused Disconnect Switch

230/208-60-1


USE COPPER OR ALUMINUM WIRE

	FACTORY WIRING	FIELD WIRING
Low Voltage	————	-----
High Voltage	————	-----

- ⚠ Remove jumper for two stage heat.
- ⚠ Required only for use with optional EH3MA-1-15A and EH3MA-1-20A Heat Packages.
- ⚠ Not required when no optional heat packages are used.
- ⚠ For 208V operation move this wire to 208V transformer tap.

MODEL NU30A

4058-210C

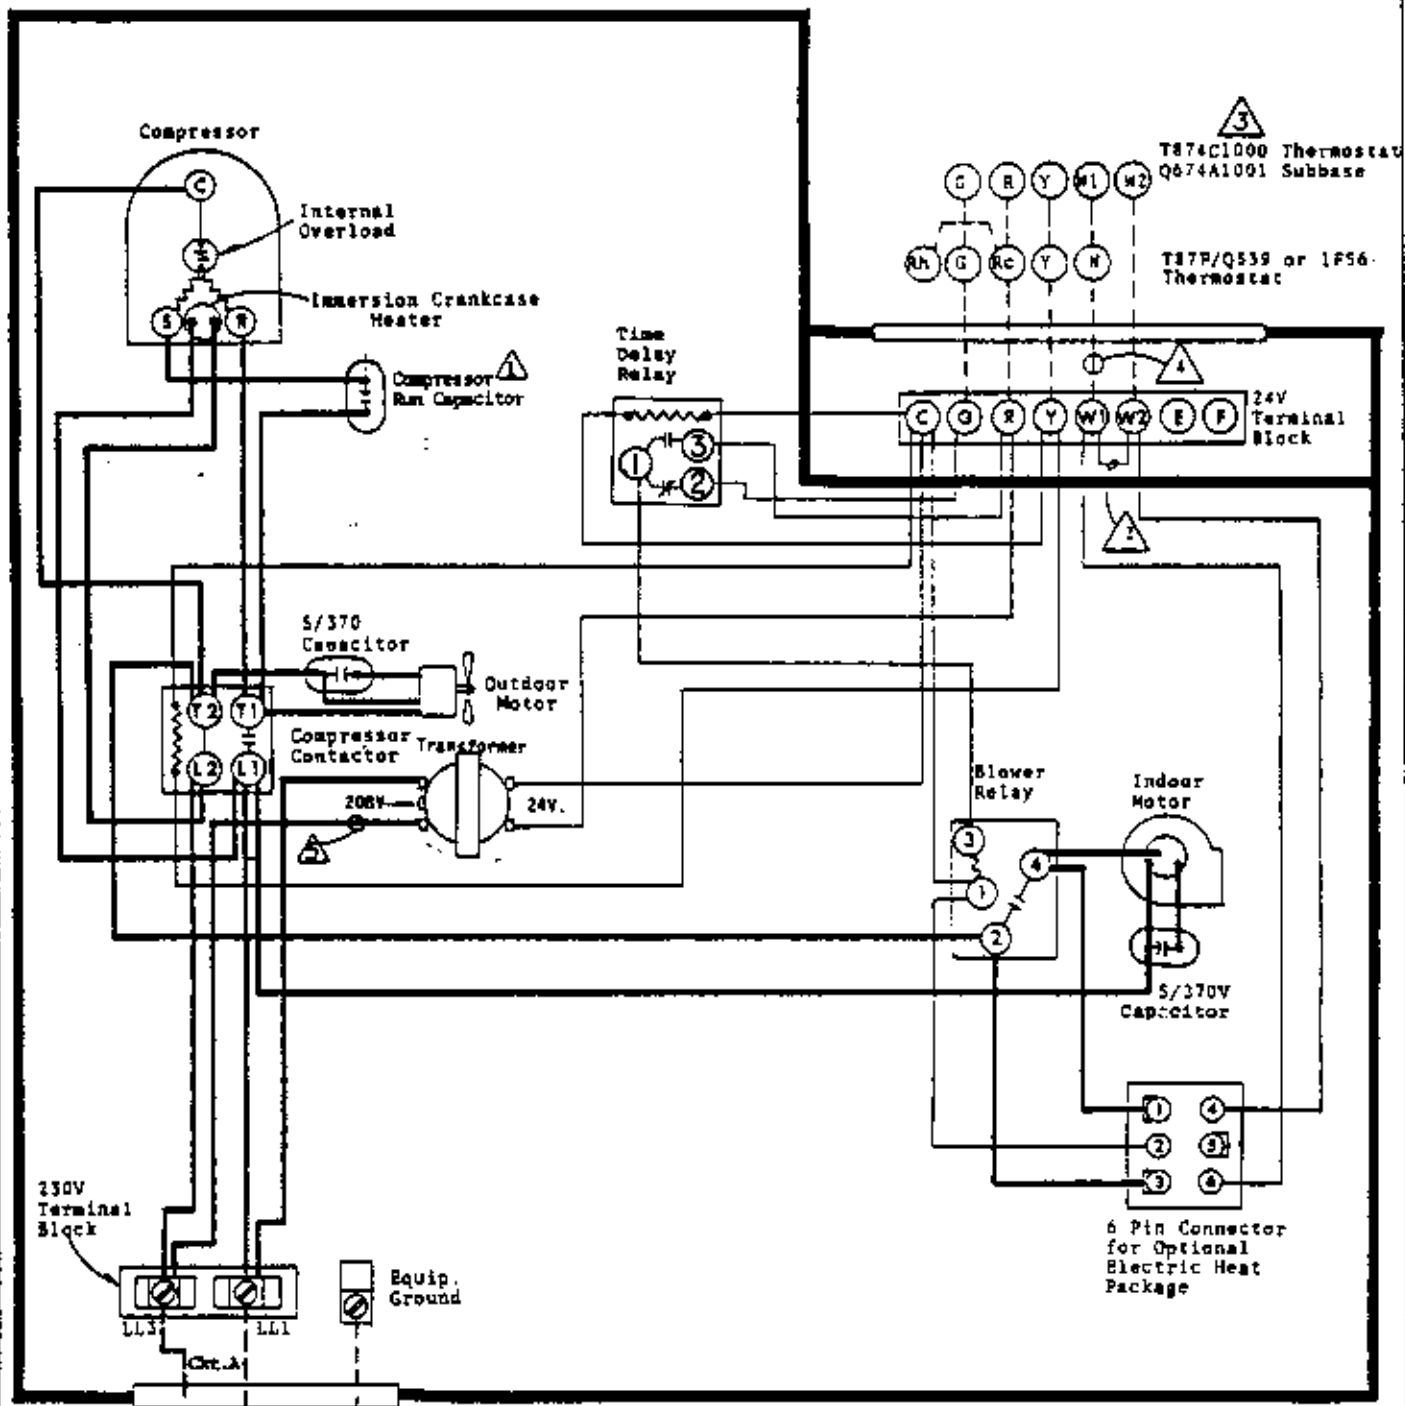

USE COPPER OR ALUMINUM WIRE

	FACTORY WIRING	FIELD WIRING
Low Voltage	————	-----
High Voltage	————	-----

Fused Disconnect Switch
230/208-60-1

- ⚠️ MU36C - 40/370 CAP.
MU42D - 40/440 CAP.
- ⚠️ Remove jumper for two stage heat.
- ⚠️ Required only for use with optional EHSMA-1-15A and EHSMA-1-20A Heat Packages.
- ⚠️ Not required when no optional heat packages are used.
- ⚠️ For 208V operation move this wire to 208V transformer tap.

MODELS
MU36C, MU42D

4058-220D